

Table of Contents

1	Introduction	2
1.1	Intended Use	2
1.2	Type Plate	2
1.3	Contents	2
1.4	Ordering instructions	3
1.5	Product Description	3
2	Safety instructions	4
2.1	Important Information	4
2.2	General Hazard Warnings	5
2.3	Special conditions for safe use	6
2.4	Ambient Temperature range of the equipment	6
3	Transport and storage	7
4	Installation and connection	8
4.1	Installation site requirements	8
4.2	Installation	8
4.3	Installing the sampling tube (optional)	8
4.4	Installing the downstream filter	9
4.5	Insulation	9
4.6	Connecting the Gas Line	9
4.6.1	Connecting the calibrating gas line (optional)	10
4.7	Electrical Connections	10
4.7.1	Version Without Terminal Box	10
4.7.2	Version With Terminal Box	10
4.7.3	Connecting the Temperature Switch	11
4.7.4	Connecting the Earth Conductor/Grounding	11
5	Operation and Control	12
5.1	Before Startup	12
6	Maintenance	13
6.1	Maintaining the filter element	14
6.1.1	Replacing the downstream filter	14
6.2	Maintenance Schedule	14
7	Service and repair	15
7.1	Troubleshooting	15
7.2	Spare Parts and Accessories	15
8	Disposal	16
9	Appendices	17
9.1	Technical Data	17
9.2	Connection Diagram	18
9.3	Terminal Diagram Probe Terminal Box	18
9.4	Flow chart	19
9.5	Dimensions	20
9.6	List of chemical resistance	22
9.7	User book (Please make copies)	23
10	Attached Documents	24