

Table of Contents

1	Introduction	3
1.1	Intended Use	3
1.2	Type Plate	3
1.3	Contents	3
1.4	Ordering instructions	4
1.5	Product Description	5
2	Safety instructions	6
2.1	Important Information	6
2.2	General Hazard Warnings	7
2.3	Special conditions for safe use	8
2.4	Ambient Temperature range of the equipment	8
3	Transport and storage	9
4	Installation and connection	10
4.1	Installation site requirements	10
4.2	Installation	10
4.3	Installing the sampling tube (optional)	10
4.4	Installing the downstream filter	11
4.5	Installing the upstream filter (Optional)	11
4.6	Insulation	11
4.7	Connecting the Gas Line	11
4.7.1	Blowback Connection	12
4.7.2	Connecting the calibrating gas line (optional)	12
4.8	Connecting the Backwashing System and the Compressed Air Cylinder (Optional)	12
4.9	Electrical Connections	13
4.9.1	Version Without Terminal Box	13
4.9.2	Version With Terminal Box	13
4.9.3	Connecting the Temperature Switch	14
4.9.4	Connecting the Earth Conductor/Grounding	14
4.9.5	Solenoid Valves (Optional)	14
4.9.6	Limit Switch (Optional)	14
5	Operation and Control	15
5.1	Before Startup	15
6	Maintenance	16
6.1	Maintaining the filter element	17
6.1.1	Replacing the downstream filter	17
6.1.2	Replacing the upstream filter	18
6.2	Backwashing the Intake Filter (within the process stream)	18
6.2.1	Manual Blowback (Without Blowback Control)	19
6.2.2	Automatic Blowback (External Blowback Control)	19
6.3	Maintenance Schedule	19
7	Service and repair	20
7.1	Troubleshooting	20
7.2	Spare Parts	21
8	Disposal	22
9	Appendices	23
9.1	Technical Data	23
9.2	Connection Diagram	24
9.3	Terminal Diagram Probe Terminal Box	25
9.4	Terminal Diagram Terminal Box Limit Switch	25
9.5	Flow chart	25
9.6	Dimensions	26
9.7	List of chemical resistance	28
9.8	User book (Please make copies)	29

10 Attached Documents.....	30
----------------------------	----