

3 Transport and storage

The products should only be transported in their original packaging or a suitable replacement.

Gas coolers with flammable refrigerant are marked on their original packaging and must be stored and transported in accordance with national regulations.

When not in use, the equipment must be protected from moisture and heat. It must be stored in a covered, dry and dust-free room at a temperature of -20 °C to 60 °C (-4 °F to 140 °F).

In particular, for gas coolers with stainless steel heat exchangers for O₂ applications (suffix -O2), any contamination of parts in contact with media must be avoided during storage.