

Contents

1	Introduction	3
1.1	Intended use	3
1.2	Overview	3
1.3	Scope of delivery	3
1.4	Ordering instructions.....	4
1.4.1	Gas cooler with one gas path inside the heat exchanger.....	4
1.4.2	Gas cooler with two gas paths inside the heat exchanger	5
1.4.3	Gas cooler with two heat exchangers in series	6
1.4.4	Gas cooler for H ₂ /O ₂ applications	6
2	Safety instructions	7
2.1	Important advice	7
2.2	General Hazard Warnings	8
3	Transport and storage	10
4	Installation and connection	11
4.1	Installation site requirements.....	11
4.2	Installation	12
4.2.1	Connecting the filter gas connections (optional)	12
4.2.2	Flow adapter connection (optional)	12
4.2.3	Connecting the moisture detector (option)	12
4.2.4	Peristaltic pump connector (optional).....	13
4.2.5	Connecting the heat exchanger.....	13
4.2.6	Condensate drain connection	13
4.2.7	Adapter plate connection	13
4.3	Electrical connections.....	14
4.4	Signal outputs	15
4.4.1	Signalling via the display.....	15
4.4.2	Status output (terminal S2)	16
4.4.3	Analogue output (connection S3).....	16
4.4.4	Digital output (connection S4).....	16
5	Operation and control	17
5.1	Before startup.....	17
5.2	Description of functions.....	17
5.3	Use of menu functions.....	18
5.3.1	Lock Menu.....	18
5.3.2	Menu navigation overview	19
5.4	Description of menu functions	21
5.4.1	Display Menu.....	21
5.4.2	Main menu.....	21
5.4.3	Submenu 1.....	22
5.4.4	Submenu 1 (global settings).....	23
5.4.5	Set favourite menu.....	27
5.5	Using the Digital Interface.....	27
5.6	Modbus Configuration	27
5.7	Modbus Communication	27
5.8	Modbus Register.....	28
6	Maintenance.....	32
7	Service and repair.....	34
7.1	Carrying out maintenance, repair and modification work	34
7.1.1	Opening the housing	35
7.1.2	Replacing the fan	35
7.1.3	Replacing the controller board.....	36
7.1.4	Replacing the MCP2 microcontroller board	37
7.1.5	Replacing the MCD400 display module	37
7.1.6	Cleaning and removal of the heat exchanger	37
7.1.7	Replacing the peristaltic condensate pump (optional)	37

7.1.8	Replacement of the hose for the peristaltic condensate pump (optional)	38
7.1.9	Replacing the filter element (option)	38
7.1.10	Drying of the moisture detector (option).....	38
7.1.11	Calibration of the moisture detector (option).....	38
7.2	Troubleshooting	39
7.2.1	Error Messages in the Display	40
7.3	Spare Parts.....	42
7.3.1	Spare Parts and Accessories	42
7.3.2	Spare parts and accessories for cooler with -H2/-O2 heat exchanger.....	42
8	Disposal	43
9	Appendices	44
9.1	Gas Cooler Technical Data	44
9.2	Technical Data - Options	47
9.3	Diagram typical installation	48
9.4	Cooler flow diagrams	49
9.5	Performance curves.....	50
9.6	Heat exchanger	51
9.6.1	Heat exchanger description	51
9.6.2	Heat exchanger overview	52
9.7	Dimensions	54
10	Attached Documents.....	57