

Contents

1	Introduction	3
1.1	Intended use	3
1.2	Overview	3
1.3	Scope of delivery	3
1.4	Ordering instructions.....	4
1.4.1	Gas cooler with one or two heat exchangers	4
1.4.2	Gas cooler with two heat exchangers in series	5
2	Safety instructions	6
2.1	Important advice	6
2.2	General Hazard Warnings	7
3	Transport and storage	9
4	Installation and connection	10
4.1	Installation site requirements.....	10
4.2	Installation	11
4.2.1	Connecting the filter gas connections (optional)	11
4.2.2	Flow adapter connection (optional)	11
4.2.3	Connecting the moisture detector (option)	11
4.2.4	Peristaltic pump connector (optional).....	11
4.2.5	Connecting the heat exchanger.....	12
4.2.6	Condensate drain connection	13
4.3	Electrical connections.....	13
4.4	Signal outputs	14
4.4.1	Signalling via the display.....	14
4.4.2	Humidity status output (A).....	15
4.4.3	Status output cooler (B).....	15
4.4.4	Analogue output (C).....	15
4.4.5	Digital output (E).....	15
5	Operation and control	16
5.1	Before startup.....	16
5.2	Description of functions.....	16
5.3	Use of menu functions.....	17
5.3.1	Lock Menu.....	17
5.3.2	Menu navigation overview	18
5.4	Description of menu functions	20
5.4.1	Display Menu.....	20
5.4.2	Main menu.....	20
5.4.3	Submenu 1.....	21
5.4.4	Submenu 1 (global settings).....	22
5.4.5	Set favourite menu.....	26
5.5	Using the Digital Interface.....	26
5.6	Modbus Configuration	26
5.7	Modbus Communication	26
5.8	Modbus Register.....	27
6	Maintenance.....	31
7	Service and repair.....	33
7.1	Carrying out maintenance, repair and modification work	33
7.1.1	Opening the housing	34
7.1.2	Replacing the fan	34
7.1.3	Replacing the controller board.....	35
7.1.4	Replacing the MCP2 microcontroller board	36
7.1.5	Replacing the MCD400 display module	36
7.1.6	Cleaning and removal of the heat exchanger	36
7.1.7	Replacing the peristaltic condensate pump (optional)	36
7.1.8	Replacement of the hose for the peristaltic condensate pump (optional)	36
7.1.9	Replacing the filter element (option)	37

7.1.10	Drying of the moisture detector (option).....	37
7.1.11	Calibration of the moisture detector (option).....	37
7.2	Troubleshooting	38
7.2.1	Error Messages in the Display	39
7.3	Spare parts	40
7.3.1	Spare parts and accessories	40
8	Disposal	41
9	Appendices	42
9.1	Gas Cooler Technical Data	42
9.2	Technical Data - Options	44
9.3	Performance curves.....	45
9.4	Typical installation arrangement (1 gas path).....	46
9.5	Typical installation arrangement (2 gas paths)	46
9.6	Heat exchanger	46
9.6.1	Heat exchanger description	46
9.6.2	Heat exchanger overview	47
9.7	Dimensions	48
10	Attached documents	50