

Contents

1	Introduction	2
1.1	Intended use	2
1.2	Item number structure	3
1.3	Type plate	4
1.4	Scope of delivery	4
1.5	Product description	4
2	Safety instructions	5
2.1	Important advice	5
2.2	General hazard warnings	6
3	Transport and storage	8
4	Installation and connection	9
4.1	Requirements for the set-up location	9
4.1.1	Outdoor installation	10
4.2	Installation	10
4.3	Special condition moist sample gas	10
4.3.1	Alteration of hanging pump bodies	11
4.4	Connecting the gas tubes	11
4.4.1	Monitoring the sample gas pump	12
4.5	Electrical connections	13
5	Operation and control	14
5.1	Switching on the sample gas pump	15
5.2	Operating the sample gas pump	15
6	Maintenance	16
6.1	Maintenance plan	17
6.2	Inspecting the bellow	18
6.3	Replacing bellow and connecting rod-eccentric-combination	19
6.4	Replacement of the O-ring of the bypass valve (optional)	20
6.5	Replacing the inlet and outlet valves	20
6.6	Cleaning the pump console	20
6.7	Changing the Coupling	20
7	Service and repair	21
7.1	Troubleshooting and fault rectification	21
7.2	Spare parts and accessories	22
8	Disposal	23
9	Appendices	24
9.1	General specifications for all pumps	24
9.2	Technical data for P2.3C and P2.4C	24
9.3	Temperature classes for P2.3C and P2.4C	24
9.4	Dimensions	25
9.5	List of chemical resistance	26
9.6	User book (Please make copies)	27
10	Attached documents	28