

Contents

1	Introduction	2
1.1	Intended use	2
1.2	Product key	3
1.3	Scope of delivery	4
1.4	Product description	4
2	Safety instructions	5
2.1	Important advice	5
2.2	General indication of risk	5
3	Transport and storage	7
4	Installation and connection	8
4.1	Requirements for the set-up location	8
4.1.1	Outdoor installation	8
4.2	Mounting	9
4.3	Special condition moist sample gas	9
4.3.1	Alteration of hanging pump head	10
4.4	Connecting the sample gas line	10
4.5	Electrical connections	11
5	Operation and control	12
5.1	Switching on the sample gas pump	12
5.2	Operating the sample gas pump	13
6	Maintenance	14
6.1	Replacing the inlet and outlet valves	15
6.2	Replacing bellows and connecting rod-eccentric-combination	15
6.3	Replacement of the O-ring of the bypass valve (optional)	16
6.4	Changing the Coupling	16
7	Service and repair	17
7.1	Troubleshooting and fault rectification	18
7.2	Spare Parts	19
8	Disposal	20
9	Appendices	21
9.1	General specifications for all pumps	21
9.2	Feed Curves	21
9.3	Technical data for P2.3 and P2.83	21
9.4	Technical data for P2.4 and P2.84	21
9.5	Dimensions	22
10	Attached documents	23