

Contents

1	Introduction	2
1.1	Intended use	2
1.2	Product key	3
1.3	Scope of delivery	4
1.4	Product description	4
2	Safety instructions	5
2.1	Important advice	5
2.2	General indication of risk	5
3	Transport and storage	7
4	Installation and connection	8
4.1	Requirements for the set-up location	8
4.1.1	Outdoor installation	8
4.2	Mounting	8
4.3	Special condition moist sample gas	9
4.3.1	Alteration of hanging pump head	9
4.4	Connecting the gas lines	10
4.5	Electrical connections	10
5	Operation and control	12
5.1	Switching on the sample gas pump	12
5.2	Operating the sample gas pump	13
6	Maintenance	14
6.1	Replacing the inlet and outlet valves	15
6.2	Replacing bellows and connecting rod-eccentric-combination	15
6.3	Replacement of the O-ring of the bypass valve (optional)	16
7	Service and repair	17
7.1	Troubleshooting	17
7.2	Spare Parts	18
8	Disposal	19
9	Appendices	20
9.1	Technical Data	20
9.2	Feed Curves	20
9.3	Dimensions	21
9.4	Dimensions piping kit/tubing kit for P4.83 with parallel operation	22
10	Attached documents	23