

4 Installation and connection

4.1 Installation site requirements

Sample gas probes are intended for flange mounting.

- Installation site and installation position are determined based on requirements specific to the application.
- If necessary, the connection piece should be slightly tilted toward the centre of the channel.
- The installation site should be protected from the weather. Protect the device from dust, falling objects, and external blows.
- In addition, adequate and safe access for installation and future maintenance work should be provided. In particular, note the length required to uninstall the probe tube!

If the probe is transported to the installation site in pieces, it will first need to be assembled.

4.2 Installing the sampling tube (optional)

The sampling tube, if necessary with the fitting extension, must be screwed in. The probe is then attached to the mating flange using the included seal and nuts.


4.3 Installing the downstream filter (optional)

NOTICE



The downstream filter and the O-ring for the handle must be inserted prior to first start-up.

Operating without downstream filter prohibited!

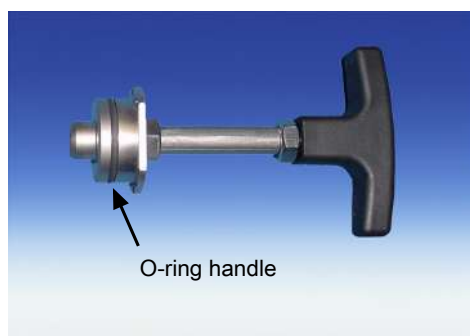

Attach an O-ring suitable for the expected ambient temperature to the handle.

Attach the downstream filter to the handle. Then carefully insert the handle with filter in the gas probe and turn 90° to secure.

Verify the handle is seated correctly. When seated correctly it locks onto the filter housing.

4.4 Insulation

On heated probes completely insulate any exposed flange areas and, if applicable, the connection piece to absolutely prevent thermal bridges. The insulating material must meet the application requirements and be weatherproof.

4.5 Connecting the Gas Line

The sample gas line must be carefully and properly connected using a suitable fitting.

This table provides an overview of the sample gas probe connections:

	Probe GAS 222	Reservoir PAV01	Ball valve pneumatic drive	Control valve 3/2-way solenoid valve
Connecting flange ¹⁾	DN65/PN6/ DN3"-150 ²⁾			
Sample gas inlet	G3/4			
Sample gas outlet	NPT 1/4			
Blowback connection	G3/8			
Test gas connection ¹⁾	Tube Ø6 mm Tube Ø1/4 ²⁾			
Filling port		NPT 1/4		
Condensate		G1/2		
Bypass		NPT 1/4		
Control air			G1/8	G1/4 NPT 1/4

Tab. 1: Gas Probe Connections (Varies by Model)

¹⁾ Varies by version.

²⁾ Only GAS 222.xx ANSI and GAS 222.xx AMEX

WARNING



Gas emanation

Sample gas can be harmful to the health!

Check the lines for leaks.

4.5.1 Connecting the Gas Line

Please note the following items when connecting the sample gas line (NPT 1/4") on heated probes to prevent thermal bridges:

- Choose the shortest possible screw connection.
- Shorten the connection pipe for the sample gas line as much as possible. To do so, remove the insulation around the sample gas line. This is done by loosening the fixing bolts.

CAUTION



Fragile

The insulation is fragile. Handle with care, do not drop.

After connecting the sample gas line it must be braced and secured with the clamp.

Long sample gas lines may require additional support clamps along the way to the analysis system! Once all lines have been connected and checked for leaks, carefully reinstall and secure the insulation.

WARNING



Gas emanation

Sample gas can be harmful to the health!

Check the lines for leaks.

4.5.2 Connecting the calibrating gas line (optional)

Connecting the calibrating gas line requires a Ø 6 mm or Ø 1/4" pipe fitting.

If the calibrating gas connection was ordered with check valve, a Ø 6 mm or Ø 1/4" pipe can be connected directly to the check valve.

4.6 Electrical connections

WARNING**Hazardous electrical voltage**

The device must be installed by trained staff only.

CAUTION**Wrong mains voltage**

Wrong mains voltage may damage the device.
Regard the correct mains voltage as given on the type plate.

The operator must install an external separator for the device which is clearly assigned to this device.

This separator must:

- be located near the device
- be easy to reach by the operator
- comply with IEC 60947-1 and IEC 60947-3

separate all live conductors of the supply connection and the status output, and must not be installed in the power cable

The mains supply of the device must be fused according to the specifications in the technical data.

4.6.1 Plug Connection

The probe includes two cubic plugs per EN 175301-803. The plug is configured so it cannot be connected reversed. For safety reasons this configuration must not be modified.

One plug is for the power supply, the other is the alarm output. Please see the enclosed terminal diagram for the connection.

The probe itself has self-regulating heating elements and can therefore be connected to a 100 V - 230 VAC power supply.