

Table of Contents

1	Introduction	2
1.1	Intended Use	2
1.2	Type Plate	2
1.3	Scope of Delivery	2
1.4	Ordering instructions	3
1.5	Product Description	3
2	Safety instructions	4
2.1	Important advice	4
2.2	General hazard warnings	5
3	Transport and storage	6
4	Installation and connection	7
4.1	Installation site requirements	7
4.2	Installing the sampling tube (optional)	7
4.3	Installing the downstream filter (optional)	7
4.4	Insulation	7
4.5	Connecting the Gas Line	8
4.5.1	Connecting the Gas Line	8
4.5.2	Connecting the calibrating gas line (optional)	8
4.6	Electrical connections	9
4.6.1	Plug Connection	9
5	Operation and Control	10
6	Service	11
6.1	Maintaining the filter element	11
6.1.1	Replacing the downstream filter	12
6.1.2	Replacing the Outlet Filter with Micro-Fibreglass Filter Element	12
7	Service and repair	13
7.1	Troubleshooting	13
7.2	Spare Parts	13
8	Disposal	14
9	Appendices	15
9.1	Technical Data	15
9.2	Flow chart	15
9.3	Dimensions	16
9.4	Dimensions (ANSI flange)	17
9.5	Connection Diagram	18
9.6	User book (Please make copies)	19
10	Attached Documents	20