



Sample gas probes

GAS 222.17

Installation and Operation Instructions

Original instructions





Bühler Technologies GmbH, Harkortstr. 29, 40880 Ratingen
Tel. +49 (0) 21 02 / 49 89-0
Internet: www.buehler-technologies.com
E-Mail: analyse@buehler-technologies.com

Read this instruction carefully prior to installation and/or use. Pay attention particularly to all advises and safety instructions to prevent injuries. Bühler Technologies can not be held responsible for misusing the product or unreliable function due to unauthorised modifications.

All rights reserved. Bühler Technologies GmbH 2025

Document information

Document No..... BE460039
Version..... 07/2025

Table of Contents

1	Introduction	2
1.1	Intended Use	2
1.2	Type Plate	2
1.3	Scope of Delivery	2
1.4	Ordering instructions	2
1.5	Product Description	3
2	Safety instructions	4
2.1	Important advice	4
2.2	General hazard warnings	5
3	Transport and storage	6
4	Installation and connection	7
4.1	Installation site requirements	7
4.2	Installing the Sampling Tube	7
4.3	Installing the downstream filter	7
4.4	Insulation	7
4.5	Connecting the Gas Line	8
4.5.1	Connecting the Gas Line	8
4.5.2	Connecting the calibrating gas line (optional)	9
4.6	Electrical connections	9
4.6.1	Plug Connection	9
5	Operation and Control	10
6	Service	11
6.1	Maintaining the filter element	11
6.1.1	Replacing the downstream filter	12
6.1.2	Replacing the Outlet Filter with Micro-Fibreglass Filter Element	12
7	Service and repair	13
7.1	Troubleshooting	13
7.2	Spare Parts	13
8	Disposal	14
9	Appendices	15
9.1	Technical Data	15
9.2	Flow chart	15
9.3	Dimensions	16
9.4	Dimensions (ANSI flange)	17
9.5	Connection Diagram	18
9.6	User book (Please make copies)	19
10	Attached Documents	20

1 Introduction

1.1 Intended Use

The sample gas probe is intended for installation into gas analysis systems in commercial applications.

Sample gas probes are among the main components in a gas conditioning system.


- Therefore also note the related drawing in the data sheet in the appendix.
- Before installing the device, verify the listed technical data meet the application parameters.
- Further verify all contents are complete.

Please refer to the type plate to identify your model. In addition to the job number/ID number, this also contains the article number and model designation.

Please note the specific values of the device when connecting, and the correct versions when ordering spare parts.

1.2 Type Plate

Example:

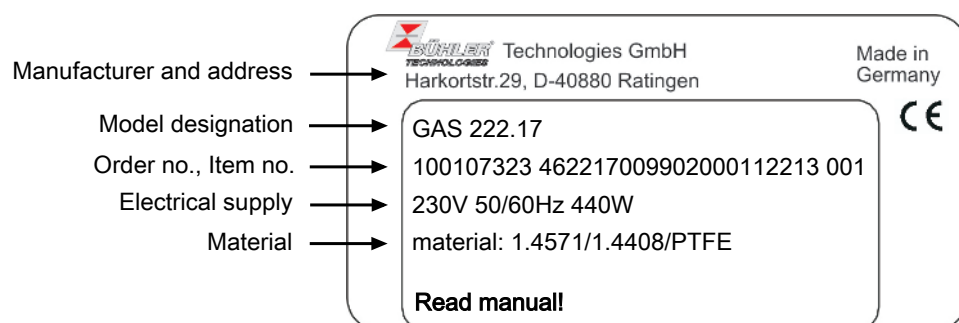

1.3 Scope of Delivery

- 1 x Sample gas probe
- 1 x Flange gasket and screws
- Product documentation
- Connection and mounting accessories (only optional)

1.4 Ordering instructions

The item number is a code for the configuration of your unit. Please use the following model key:

4622217	X	9	9	0	3	X	0	0	9	9	9	9	9	9	SN	Product characteristic
																Flange
0																DIN DN65 PN6
1																ANSI 3"-150 lbs - with CSA C & US approval
2																ANSI 3"-150 lbs - without CSA C & US approval
																Power supply sample probe
																115/230 V
																Calibrating gas connection
																No calibrating gas connection
																6 mm
																6 mm + check valve
																1/4"
																1/4" + check valve
																Glass coating of parts in contact with media
																SN SilcoNert® 2000 ¹⁾

¹⁾ Extends delivery time by approx. 6 weeks.

1.5 Product Description

Probe	Description
GAS 222.17	Probe with downstream filter, self-regulating
Accessories	Please refer to the data sheet at the end of this manual for accessories for this probe

2 Safety instructions

2.1 Important advice

The device may only be operated if:

- the product is used under the conditions described in the operating and installation manual, in accordance with the type label, and for the intended applications; Any unauthorised modifications to the device will void the warranty provided by Bühler Technologies GmbH,
- the information and markings on the type plates are observed,
- the limit values specified in the data sheet and in this operating and installation manual are observed,
- the device is not operated outside its specification,
- monitoring/protective devices are correctly connected,
- Service and repairs not described in these instructions is performed by Bühler Technologies GmbH,
- Using genuine replacement parts.

These operation instructions are a part of the equipment. The manufacturer reserves the right to change performance, specification or design data without prior notice. Keep this manual for future reference.

Signal words for warnings

DANGER

Signal word for an imminent danger with high risk, resulting in severe injuries or death if not avoided.

WARNING

Signal word for a hazardous situation with medium risk, possibly resulting in severe injuries or death if not avoided.

CAUTION

Signal word for a hazardous situation with low risk, resulting in damaged to the device or the property or minor or medium injuries if not avoided.

NOTICE

Signal word for important information to the product.

Warning signs

These instructions include the following warnings:



General warning sign



General mandatory sign



Voltage warning



Unplug from mains



Warning not to inhale toxic gases



Wear respiratory equipment



Warning of corrosive substances



Wear a safety mask



Warning of explosion hazard



Wear gloves



Warning of hot surfaces

2.2 General hazard warnings

The device may only be installed by qualified specialist personnel who are familiar with the safety requirements and associated risks. In addition, through their professional training, they possess knowledge of the relevant standards and regulations.

Be sure to observe the safety regulations relevant to the installation location and the generally accepted rules of technology. Prevent malfunctions and thereby avoid personal injury and damage to property.

The operator of the system must ensure that:

- Safety instructions and operating manuals are available and observed,
- the respective national accident prevention regulations are observed,
- the permissible data and operational conditions are maintained,
- protective devices are used and the required maintenance is performed,
- the device is disposed of according to the law,
- valid national installation regulations are observed,

Maintenance, Repair

Please note during maintenance and repairs:

- Repairs to the unit must be performed by Bühler authorised personnel.
- Only perform conversion-, maintenance or installation work described in these operating and installation instructions.
- Always use genuine spare parts.
- Do not install damaged or defective spare part. If necessary, visually inspect prior to installation to determine any obvious damage to the spare parts.

Always observe the applicable safety and operating regulations in the respective country of use when performing any type of maintenance.

DANGER

Electrical voltage

Electrocution hazard.



- a) Disconnect the device from power supply.
- b) Make sure that the equipment cannot be reconnected to mains unintentionally.
- c) The device must be opened by trained staff only.
- d) Regard correct mains voltage.



DANGER

Toxic, corrosive gases

The measuring gas led through the equipment can be hazardous when breathing or touching it.



- a) Check tightness of the measuring system before putting it into operation.
- b) Take care that harmful gases are exhausted to a safe place.
- c) Before maintenance turn off the gas supply and make sure that it cannot be turned on unintentionally.
- d) Protect yourself during maintenance against toxic / corrosive gases. Use suitable protective equipment.



DANGER

Potentially explosive atmosphere

Explosion hazard if used in hazardous areas.

The device is not suitable for operation in hazardous areas with potentially explosive atmospheres.

Do not expose the device to combustible or explosive gas mixtures.



3 Transport and storage

Only transport the product inside the original packaging or a suitable alternative.

The equipment must be protected from moisture and heat when not in use. They must be stored in a covered, dry and dust-free room at a temperature between -20 °C to 50 °C (-4 °F to 122 °F).

4 Installation and connection

4.1 Installation site requirements

Sample gas probes are intended for flange mounting.

- Installation site and installation position are determined based on requirements specific to the application.
- If necessary, the connection piece should be slightly tilted toward the centre of the channel.
- The installation site should be protected from the weather. Protect the device from dust, falling objects, and external blows.
- In addition, adequate and safe access for installation and future maintenance work should be provided. In particular, note the length required to uninstall the probe tube!

If the probe is transported to the installation site in pieces, it will first need to be assembled.

4.2 Installing the Sampling Tube

The sampling tube, if necessary with the fitting extension, must be screwed in. The probe is then attached to the mating flange using the included seal and nuts.

4.3 Installing the downstream filter

NOTICE



The downstream filter and the O-ring for the handle must be inserted prior to first start-up.

Operating without downstream filter prohibited!



Attach an O-ring suitable for the expected ambient temperature to the handle.

Attach the downstream filter to the handle. Then carefully insert the handle with filter in the gas probe and turn 90° to secure.

Verify the handle is seated correctly. When seated correctly it locks onto the filter housing.

4.4 Insulation

On heated probes completely insulate any exposed flange areas and, if applicable, the connection piece to absolutely prevent thermal bridges. The insulating material must meet the application requirements and be weatherproof.

4.5 Connecting the Gas Line

The sample gas line must be carefully and properly connected using a suitable fitting.

This table provides an overview of the sample gas probe connections:

	Probe GAS 222	Reservoir PAV01	Ball valve pneumatic drive	Control valve 3/2-way solenoid valve
Connecting flange ¹⁾	DN65/PN6/ DN3"-150 ²⁾			
Sample gas inlet	G3/4			
Sample gas outlet	NPT 1/4			
Blowback connection	G3/8			
Test gas connection ¹⁾	Tube Ø6 mm Tube Ø1/4 ²⁾			
Filling port		NPT 1/4		
Condensate		G1/2		
Bypass		NPT 1/4		
Control air			G1/8	G1/4 NPT 1/4

Tab. 1: Gas Probe Connections (Varies by Model)

¹⁾ Varies by version.

²⁾ Only GAS 222.xx ANSI and GAS 222.xx AMEX

WARNING



Gas emanation

Sample gas can be harmful to the health!

Check the lines for leaks.

4.5.1 Connecting the Gas Line

Please note the following items when connecting the sample gas line (NPT 1/4") on heated probes to prevent thermal bridges:

- Choose the shortest possible screw connection.
- Shorten the connection pipe for the sample gas line as much as possible. To do so, remove the insulation around the sample gas line. This is done by loosening the fixing bolts.

CAUTION



Fragile

The insulation is fragile. Handle with care, do not drop.

After connecting the sample gas line it must be braced and secured with the clamp.

Long sample gas lines may require additional support clamps along the way to the analysis system! Once all lines have been connected and checked for leaks, carefully reinstall and secure the insulation.

WARNING



Gas emanation

Sample gas can be harmful to the health!

Check the lines for leaks.

4.5.2 Connecting the calibrating gas line (optional)

Connecting the calibrating gas line requires a Ø6 mm or Ø1/4" pipe fitting.

If the calibrating gas connection was ordered with check valve, a Ø6 mm or Ø1/4" pipe can be connected directly to the check valve.

4.6 Electrical connections

WARNING



Hazardous electrical voltage

The device must be installed by trained staff only.

CAUTION



Wrong mains voltage

Wrong mains voltage may damage the device.
Regard the correct mains voltage as given on the type plate.

The operator must install an external separator for the device which is clearly assigned to this device.

This separator must:

- be located near the device
- be easy to reach by the operator
- comply with IEC 60947-1 and IEC 60947-3

separate all live conductors of the supply connection and the status output, and must not be installed in the power cable

The mains supply of the device must be fused according to the specifications in the technical data.

4.6.1 Plug Connection

The probe includes two cubic plugs per EN 175301-803. The plug is configured so it cannot be connected reversed. For safety reasons this configuration must not be modified.

One plug is for the power supply, the other is the alarm output. Please see the enclosed terminal diagram for the connection.

The probe itself has self-regulating heating elements and can therefore be connected to a 100 V - 230 VAC power supply.

5 Operation and Control

NOTICE

The device must not be started or operated outside the specifications!

CAUTION**Hot surface****Risk of burns**

Surface temperatures may be high during operation. Depending on the installation conditions on site, these areas may require a warning sign.

6 Service

During maintenance, remember:

- The equipment must be maintained by a professional familiar with the safety requirements and risks.
- Only perform maintenance work described in these operating and installation instructions.
- Observe the respective safety regulations and operating specifications when performing any type of maintenance.
- Always use genuine spare parts.
- The appliance must be checked for external damage and soiling at regular intervals.
- The particle filter must be replaced depending on how dirty it is.
- Any dirty surfaces should be cleaned with a damp cloth.

DANGER



Electrical voltage

Electrocution hazard.

- Disconnect the device from power supply.
- Make sure that the equipment cannot be reconnected to mains unintentionally.
- The device must be opened by trained staff only.
- Regard correct mains voltage.



DANGER



The gas inside the filter, condensate and used filter elements may be caustic or corrosive.

Sample gas can be harmful.

- Before maintenance turn off the gas supply and surge with air if necessary.
- Exhaust sample gas to a safe place.
- Protect yourself against toxic / corrosive gas during maintenance. Wear appropriate personal protection equipment.



CAUTION



Hot surface

Risk of burns

Depending on the operating parameters, the housing temperature may reach over 100 °C during operation.

Allow the unit to cool down before performing maintenance.

CAUTION



Excess pressure

The unit mustn't be pressurised or energised when opened.

If necessary, close the gas supply and ensure a safe pressure on the process end before opening.

6.1 Maintaining the filter element

The probes feature a particle filter which needs to be changed as it becomes dirty.

To do so, disconnect the voltage supply and if applicable close the shut-off valve to the process or switch off the process.

CAUTION! Do not damage the rear filter seat.

NOTICE



Ceramic filter elements are very brittle by nature. Handle them with care, don't let them fall.

Filter elements made out of sintered stainless steel can be cleaned in an ultrasonic bath and be used several times as long as both seals are still in proper conditions.

6.1.1 Replacing the downstream filter

- Unlock and lift up the weather hood.
- Turn the handle at the back end of the probe by 90° (handle must then be horizontal), pushing in slightly, and remove.
- Remove the dirty filter element and check the sealing surfaces.
- Before installing the new filter element, replace the seal on the handle plug (seal included with the filter element).
- Then carefully insert the handle with new filter, push in slightly and turn 90° (handle must then be vertical). Pull on the handle to verify the filter element is firmly seated.
- With the filter removed, if necessary also need clean the inside of the sampling tube by blowing it out or using a cleaning wand.

NOTICE




The weather hood can only be closed again when the handle is completely vertical. In order to do so, loosen the hood from the locking supports by lifting slightly and then fold down. Ensure that the hood lock clicks into place correctly.

6.1.2 Replacing the Outlet Filter with Micro-Fibreglass Filter Element

- Turn the handle at the rear end of the probe by 90° (handle must be horizontal), pushing in slightly, and remove.
- Unscrew the dirty filter element counter-clockwise from the thread of the handle.
- Pull both stainless steel filter seats off the filter element.
- Before installing the new filter element, replace the seal on the handle and inside the stainless steel filter seats (seals are included with the filter element).
- Then turn the handle with the new filter by 90° (handle must be vertical), pushing in slightly.

CAUTION! Do not damage the rear filter seat.

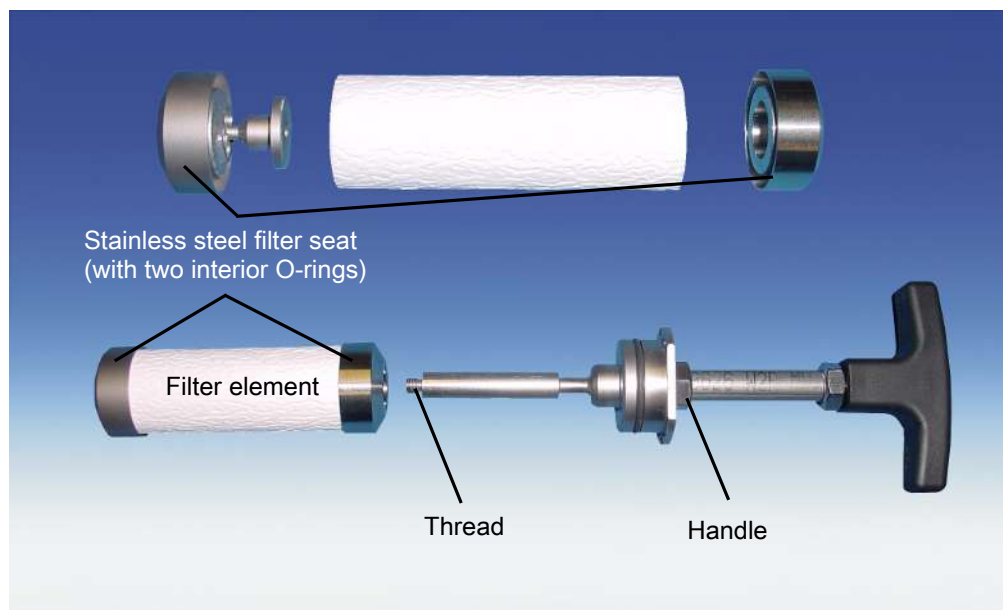

With the filter removed, you may also clean the inside of the sampling tube if necessary by blowing it out or using a cleaning wand.

7 Service and repair

If an error occurs during operation, you will find troubleshooting and corrective information in this chapter.

Repairs to the equipment may only be performed by Bühler authorised personnel.

If you have any questions, please contact our service department:

Tel.: +49-(0)2102-498955 or your local representative.

Further information about our individual service solutions for repair, modification and commissioning can be found at <https://www.buehler-technologies.com/service>.

If, after rectifying any faults and switching on the mains voltage, the device does not function correctly, it must be checked by the manufacturer. Please send the equipment inside suitable packaging to:

Bühler Technologies GmbH

- Reparatur/Service -

Harkortstraße 29

40880 Ratingen

Germany

In addition, please attach the completed and signed RMA decontamination declaration to the packaging. Otherwise, your repair order cannot be processed. You can find the form in the appendix of these instructions, or simply request it by e-mailing:

service@buehler-technologies.com.

7.1 Troubleshooting

CAUTION



Risk due to defective device

Personal injury or damage to property

- Switch off the device and disconnect it from the mains.
- Repair the fault immediately. The device should not be turned on again before elimination of the failure.



Problem / Malfunction	Possible cause	Action
No or reduced gas flow	– Filter element plugged	– Clean or replace filter element, clean sampling tube
Temperature alarm	– Heat-up not yet completed	– Wait for heat-up to complete
	– Heater	– Send in probe for repair
No heat output	– No / incorrect voltage	– Power supply
Condensation forming	– Heater defective	– Send in probe for repair
	– Thermal bridges at the sampling point	– Insulate to eliminate thermal bridges

Tab. 2: Troubleshooting

7.2 Spare Parts

Please also specify the model and serial number when ordering parts.

Upgrade and expansion parts can be found in our catalog.

Available spare parts:

Item no.	Description
9009105	Measuring outlet seal
9009079	Flange seal DN65 PN6
9009068	Flange seal FD 40 WS
46222012	O-ring kit for filter element and probe, material: Viton
46222024	O-ring kit for filter element and probe, material: Perfluoroelastomer
	Please refer to the accessories data sheet in the appendix for filter elements

8 Disposal

The applicable national laws must be observed when disposing of the products. Disposal must not result in a danger to health and environment.

The crossed out wheelie bin symbol on Bühler Technologies GmbH electrical and electronic products indicates special disposal notices within the European Union (EU).



The crossed out wheelie bin symbol indicates the electric and electronic products bearing the symbol must be disposed of separate from household waste. They must be properly disposed of as waste electrical and electronic equipment.

Bühler Technologies GmbH will gladly dispose of your device bearing this mark. Please send your device to the address below for this purpose.



We are obligated by law to protect our employees from hazards posed by contaminated devices. Therefore please understand that we can only dispose of your waste equipment if the device is free from any aggressive, corrosive or other operating fluids dangerous to health or environment. **Please complete the "RMA Form and Decontamination Statement", available on our website, for every waste electrical and electronic equipment. The form must be applied to the packaging so it is visible from the outside.**

Please return waste electrical and electronic equipment to the following address:

Bühler Technologies GmbH
WEEE
Harkortstr. 29
40880 Ratingen
Germany

Please also observe data protection regulations and remember you are personally responsible for the returned waste equipment not bearing any personal data. Therefore please be sure to delete your personal data before returning your waste equipment.

9 Appendices


9.1 Technical Data

Gas Probe Technical Data


Probe operating temperature:	max. 200 °C
Ambient temperature:	-20 to +80 °C
Self-regulating heater:	+180 °C
Low temperature alarm:	Contact open at operating temperature, closes at < 140 °C Max. switching current 4 A
Electrical data:	230 V, 2.0 A, 50/60 Hz 115 V, 3.8 A, 50/60 Hz
Protection class:	IP54
Max. operating pressure:	6 bar
Parts in contact with media:	Flange: 1.4571 Seals: Graphite/1.4404 and see filter Optional coating with SilcoNert® 2000 *

*The SilcoNert® 2000 coating forms a layer of hydrogenated, amorphous silicon on the surfaces of the measuring gas probe that are in contact with media. It is applied by chemical vapour deposition (CVD), which creates a uniformly thin layer on the surface. SilcoNert® 2000 is temperature-resistant up to 400 °C, chemically inert and hydrophobic. The coating is resistant to many chemically corrosive liquids. If you are unsure about the suitability for specific gas matrices, please contact Bühler Technologies GmbH.


9.2 Flow chart

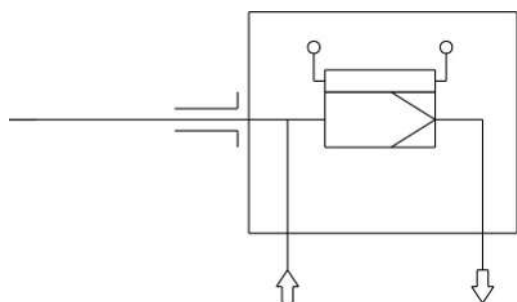

9.3 Dimensions

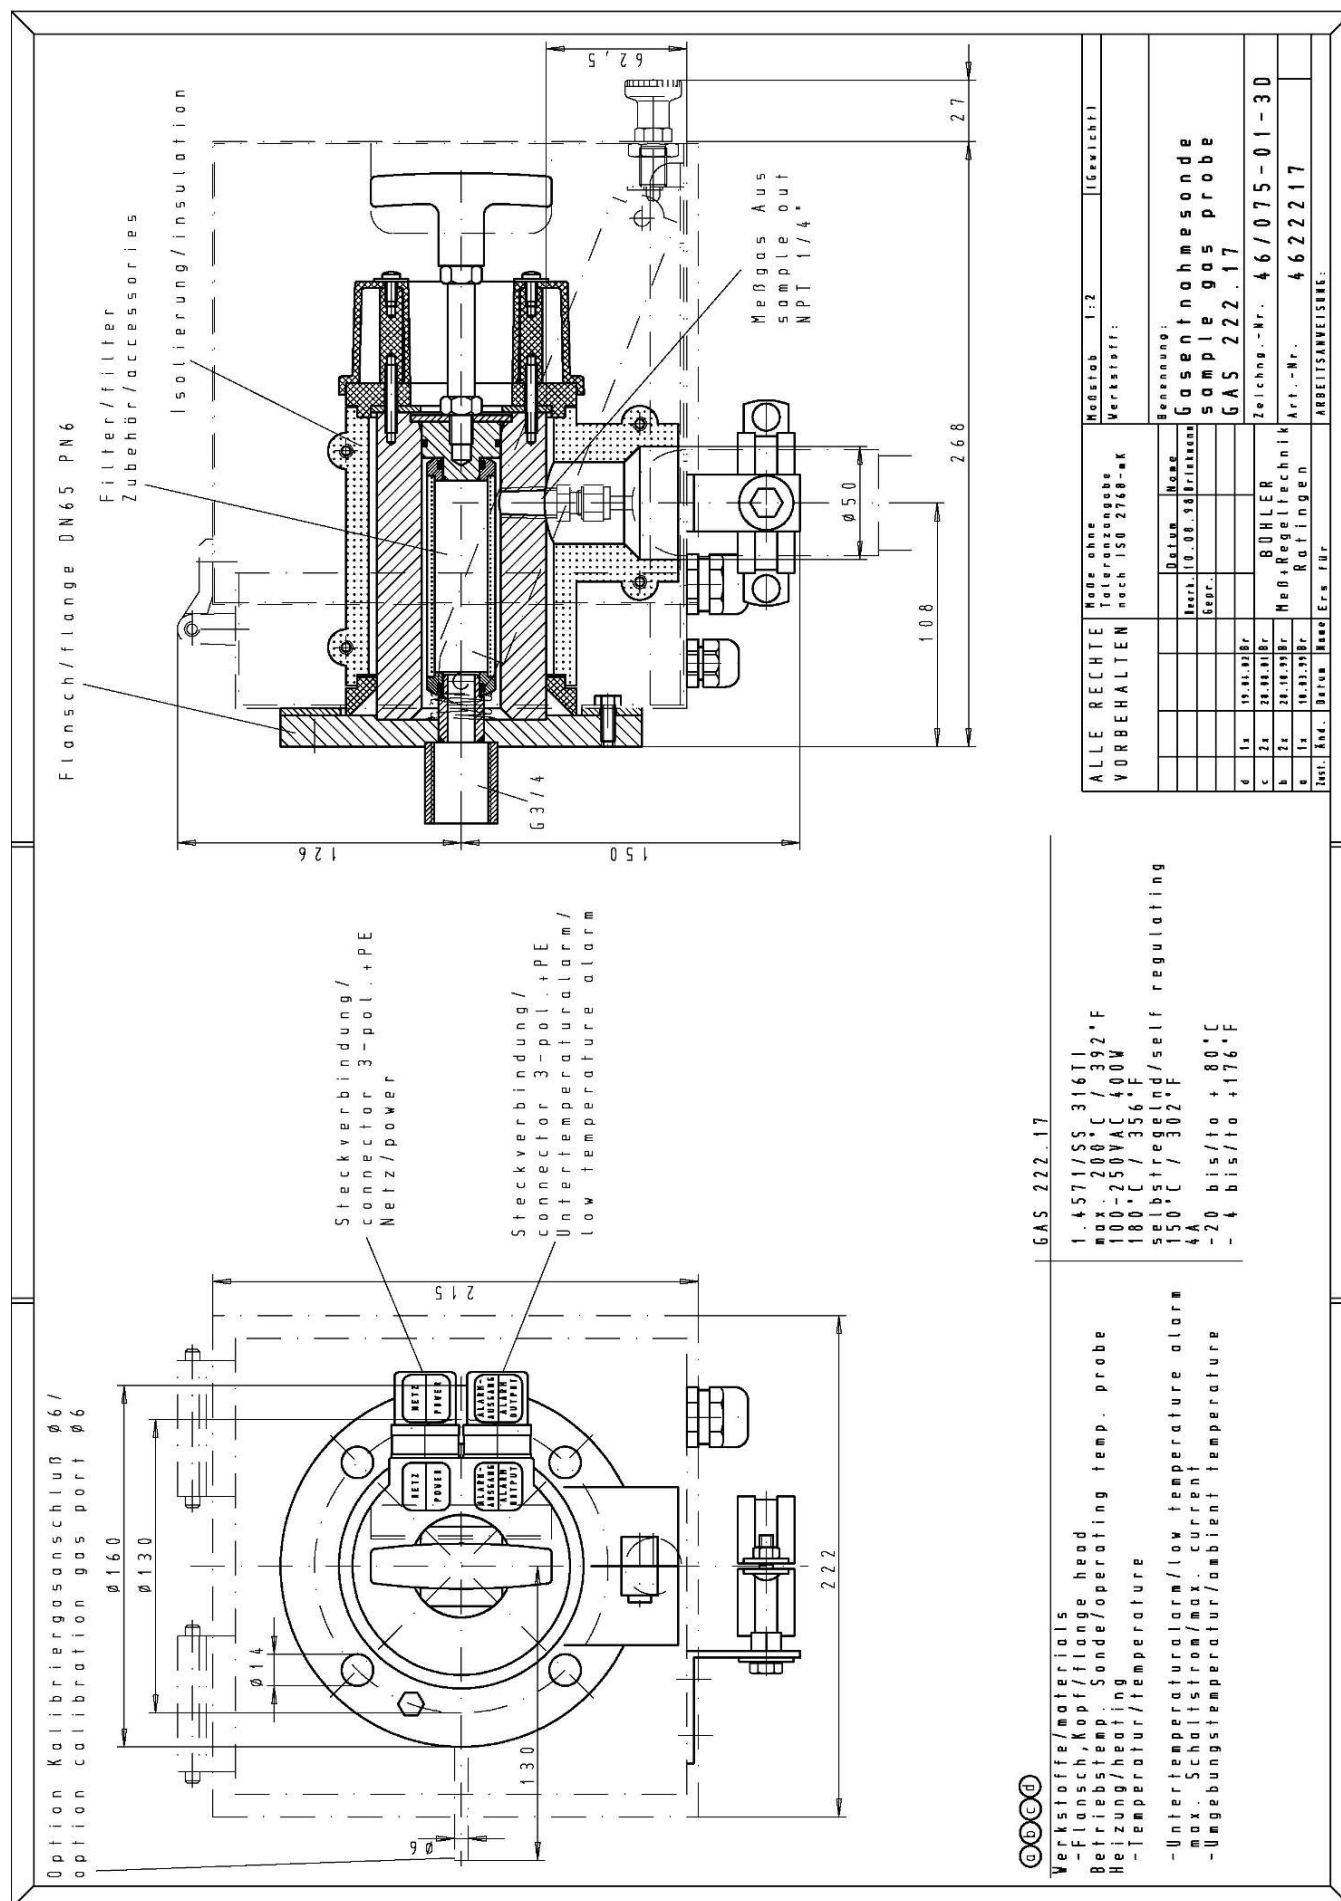

9.4 Dimensions (ANSI flange)

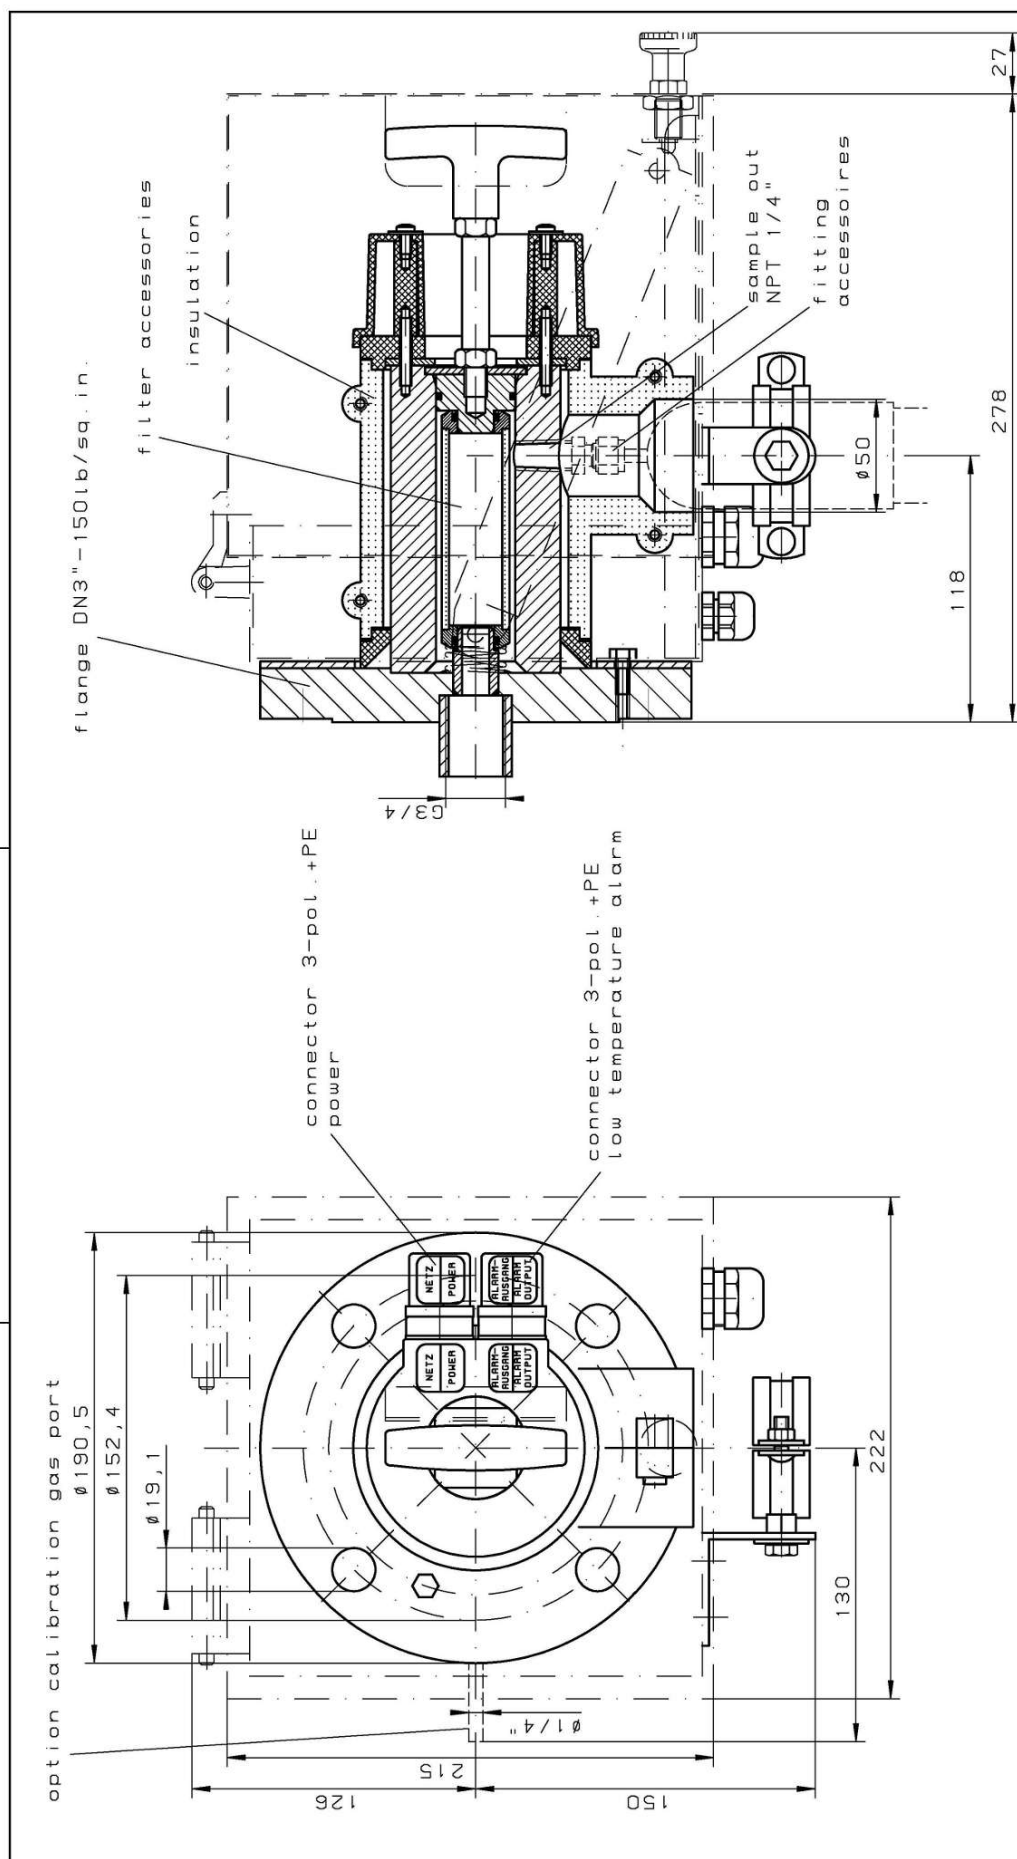


alle Kanten gratfrei		ALLE RECHTE VORBEHALTEN		Maße ohne Toleranzangabe nach ISO 2768-mK		Maßstab 1:2	(Gewicht)
Oberflächenbear- beitungszeichen				Benennung:		Werkstoff:	
✓	=			Name		sample gas probe	
✓	=			Datum		GAS 222.17 ANSI/CSA	
✓	=			Bearb.		Zeichnung-Nr. 46/111-Z01-01-3A	
✓	=			Gepr.		Art.-Nr. 4622217C	
✓	=			g		ARBEITSANLEITUNG:	
✓	=			neu		Bühler	
✓	=			Zust. Find.		12.10.06	
✓	=			Datum		Ers	
✓	=			Name		tur	

1. 4571/SS316Ti
 max. 200°C / 392°F
 115-230V 50/60Hz
 180°C / 356°F
 140°C / 284°F, 4A
 -20 up to +80°C
 -4 up to +176°F


-materials flange, head
 -operating temperature probe
 -heater self regulating
 -low temperature alarm
 -ambient temperature

9.5 Connection Diagram

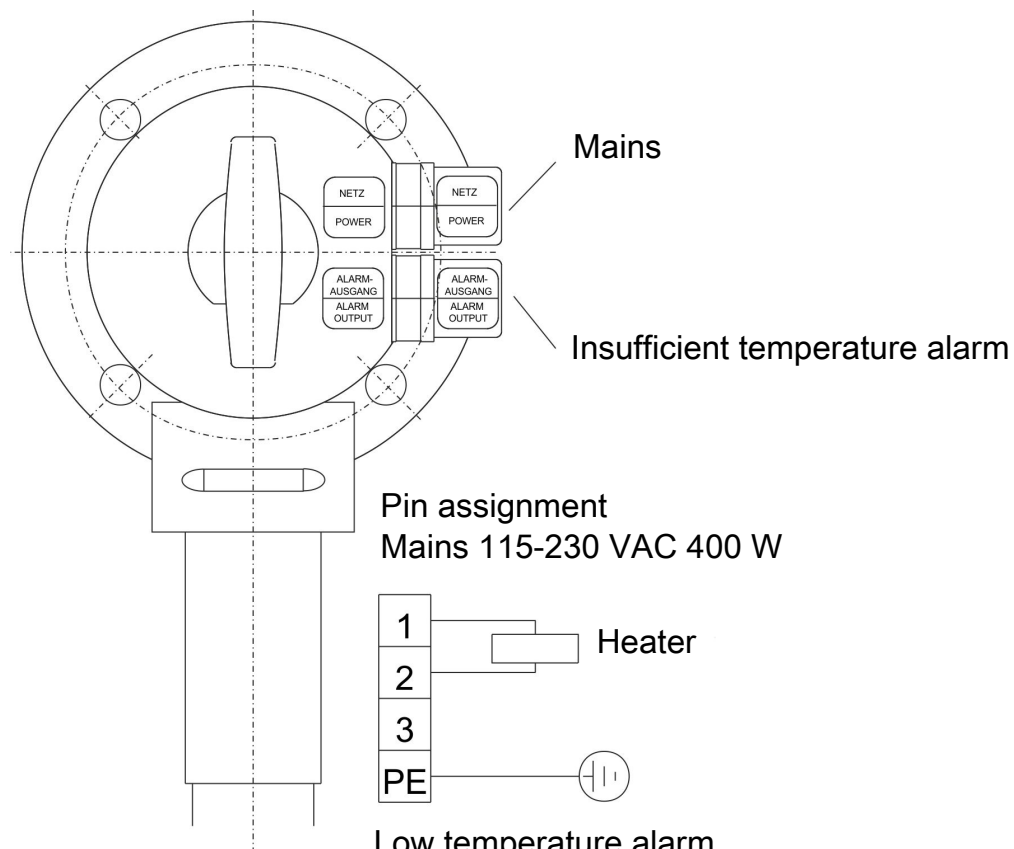

Pin assignment


Mains 115-230 VAC 400 W

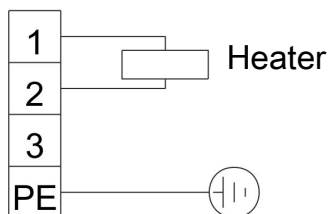


Low temperature alarm

max. Voltage 230 V

max. switching current 4 A

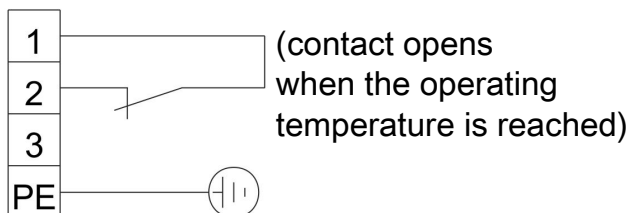

Optionally with NO contact

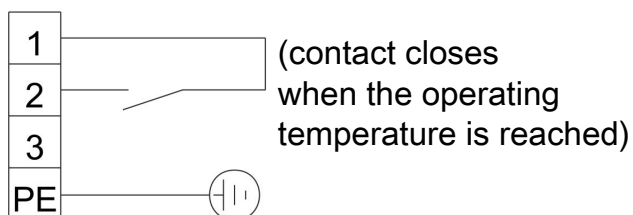

9.6 User book (Please make copies)

10 Attached Documents

- Declaration of Conformity KX460012
- Accessories Data Sheet 461099
- RMA - Decontamination Statement

EU-Konformitätserklärung
EU-declaration of conformity



Hiermit erklärt Bühler Technologies GmbH,
dass die nachfolgenden Produkte den
wesentlichen Anforderungen der Richtlinie

*Herewith declares Bühler Technologies GmbH
that the following products correspond to the
essential requirements of Directive*

2014/35/EU
(Niederspannungsrichtlinie / low voltage directive)

in ihrer aktuellen Fassung entsprechen.

in its actual version.

Folgende Richtlinie wurde berücksichtigt:

The following directive was regarded:

2014/30/EU (EMV/EMC)

Produkt / products: Beheizte Messgassonden / *Heated Sample Gas Probes*
Typ / types: GAS 222.14, GAS 222.15, GAS 222.17, GAS 222.20, GAS 222.21, GAS 222.31,
GAS 222.35, GAS 222.40

Die Betriebsmittel sind zur Gasentnahme aus dem Abgasstrom oder einem laufenden Prozess
bestimmt.

The equipment is intended for gas sampling from flue gas or a running process.

Das oben beschriebene Produkt der Erklärung erfüllt die einschlägigen
Harmonisierungsrechtsvorschriften der Union:

*The object of the declaration described above is in conformity with the relevant Union harmonisation
legislation:*

EN 61326-1:2013

EN 61010-1:2010/A1:2019/AC:2019-04

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.
This declaration of conformity is issued under the sole responsibility of the manufacturer.

Dokumentationsverantwortlicher für diese Konformitätserklärung ist Herr Stefan Eschweiler mit
Anschrift am Firmensitz.

*The person authorized to compile the technical file is Mr. Stefan Eschweiler located at the company's
address.*

Ratingen, den 09.05.2023

Stefan Eschweiler
Geschäftsführer – *Managing Director*

Frank Pospiech
Geschäftsführer – *Managing Director*

UK Declaration of Conformity



The manufacturer Bühler Technologies GmbH declares, under the sole responsibility, that the product complies with the requirements of the following UK legislation:

Electrical Equipment Safety Regulations 2016

The following legislation were regarded:

Electromagnetic Compatibility Regulations 2016

Products: Heated Sample Gas Probes
Types: GAS 222.14, GAS 222.15, GAS 222.17, GAS 222.20, GAS 222.21, GAS 222.31,
GAS 222.35, GAS 222.40

The equipment is intended for gas sampling from flue gas or a running process.

The object of the declaration described above is in conformity with the relevant designated standards:

EN 61010-1:2010/A1:2019/AC:2019-04

EN 61326-1:2013


Ratingen in Germany, 09.05.2023

A handwritten signature in blue ink, appearing to read 'Stefan Eschweiler', written over a horizontal line.

Stefan Eschweiler
Managing Director

A handwritten signature in black ink, appearing to read 'Frank Pospiech', written over a horizontal line.

Frank Pospiech
Managing Director

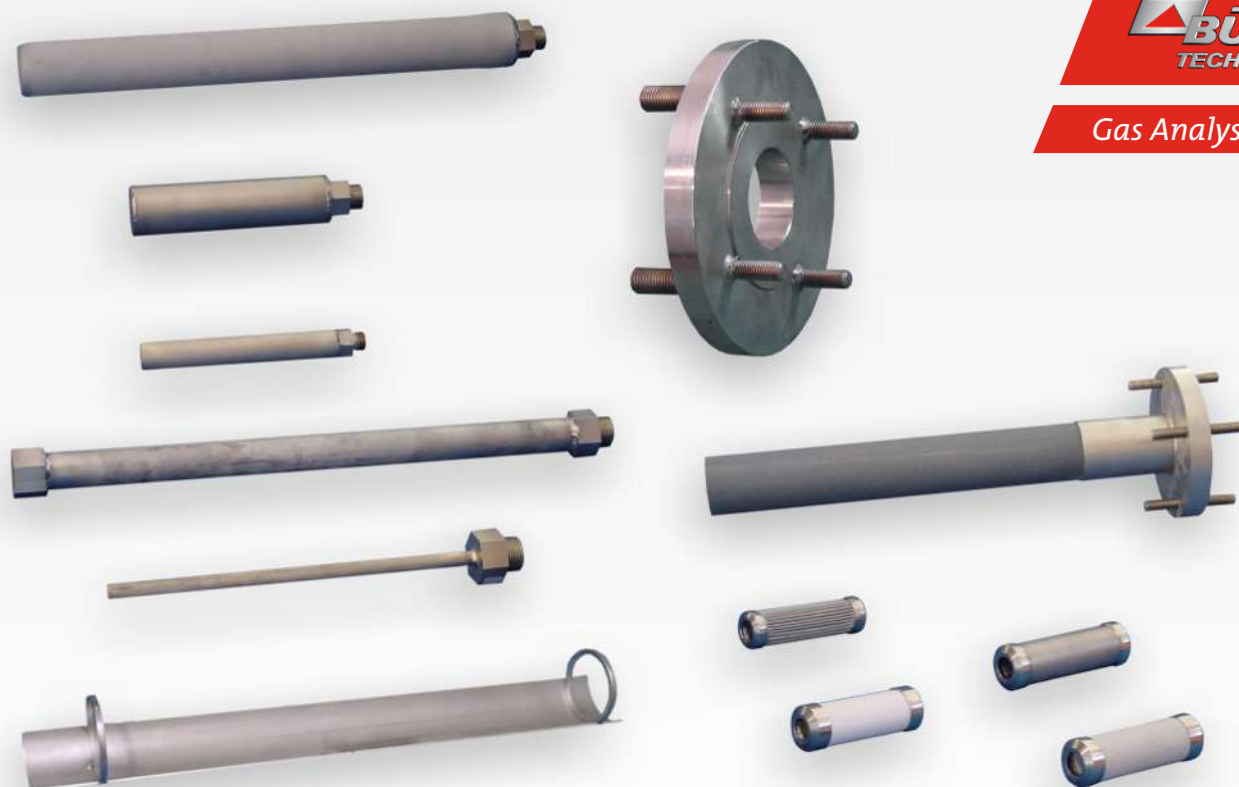

Accessories for Sample Gas Probe GAS 222

In many applications gas analysis is key for safe and efficient control of process flows, environmental protection, and quality assurance. In extractive gas analysis the selection of the gas sampling point is crucial for the reproducibility and accuracy of the analysis results.

The specific filter capacity, corrosion resistance and functional equipment requirements for the probe are determined by the composition of the sample gas. To meet these requirements, there is a wide range of accessories available for the GAS probe series.

Sampling tubes

Upstream filters

Extensions

Downstream filters

Adapter flanges

Blowback controls



Overview and functionality of the accessories

Blowback (optionally heated)

If the sample gas has a high dust content, particles will settle in the filter over time. To prevent clogging, the upstream filter can be fitted with a blowback device that flushes it with compressed air either at fixed intervals or manually, ensuring effective cleaning.

Gas connection

A purge gas connection is provided on the probes for purging the probe with inert gas or instrument air.

Demister

A demister or droplet separator is always recommended if the process gas has a high water content or aerosols. It consists of a wire mesh on which liquid droplets condense due to their higher inertia, while the gas flows through unhindered, and the condensate flows back into the process.

Adapter flanges

The probe can be fitted with a DIN or ANSI flange. Numerous adapter flanges are available to ensure adaptation to the process connection.

Downstream filter

The downstream filter is located in the probe head and is suitable for dust loads up to 2 g/m^3 . It can be used in combination with an upstream filter, thereby increasing operational reliability. The filter can be exchanged easily and without tools, using the handle.

Extension


The extension is located between the probe and the sampling tube or upstream filter. It serves as a bridge between the process connection of the probe and the sampling point (e.g. through a chimney wall). The extension can also be heated to prevent condensate cold spots.

Sampling tube (opt. upstream filter)

The sampling tube extends into the process stream and is available for various temperature and media resistance levels. An upstream filter can be connected here to remove particles from the process gas. In the case of very high dust concentrations, a blowback system can be used to clean the upstream filter.

Deflector

To protect the upstream filter from abrasion and deposits caused by particles, a deflector can be attached to the filter to divert the flow.

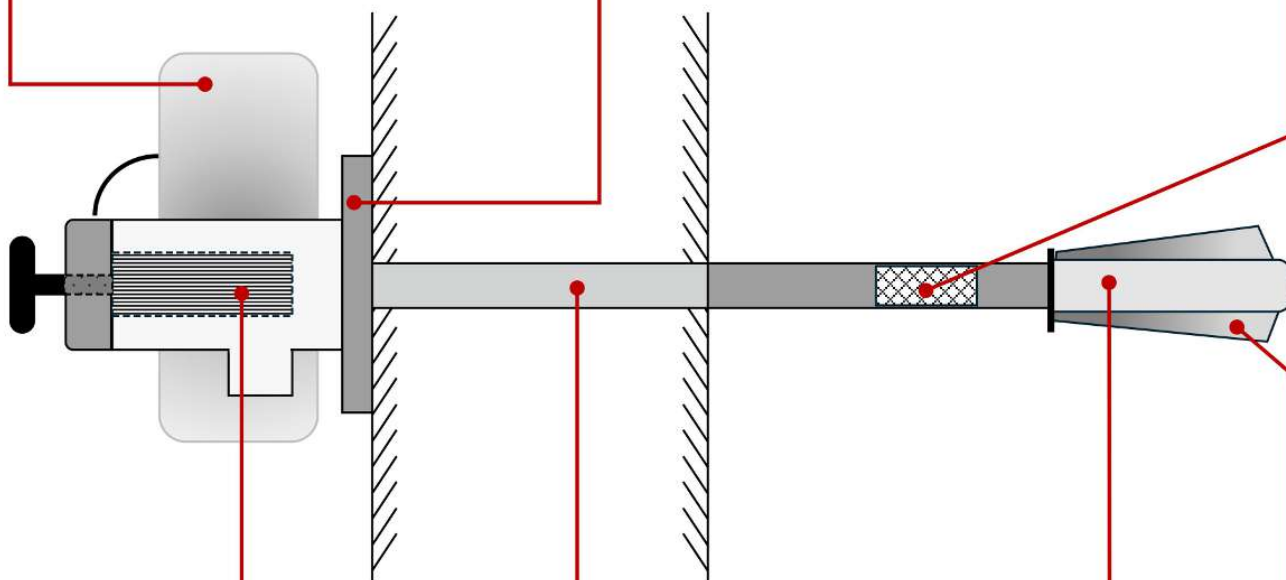

Ordering instructions

The following pages list the accessories that, together with the basic probe type, result in a functional probe. The basic probe type determines which options are available for a probe. The options for the blowback control are already defined by the item number. Further accessories are listed in the corresponding tables:

Table 1: Blowback control and extensions

Table 2: Sampling tubes

Table 3: Downstream filter

Table 4: Upstream filters

Table 5: Accessories - adapter flanges, fittings

Table 6: Spare parts and accessories

An overview of the individual accessories and their functions is shown in the diagram on the previous page.

Restrictions and notes

Blowback control integrated in the probe controller

A blowback control integrated in the probe controller is standard. Parameters such as the time and duration of the blowback are set once on the probe, after which the process is carried out automatically. The status of the controller and the condition of the blowback can be read electrically. If required, a separate RSS blowback control can also be connected to the probe, which facilitates manual blowback and is separate from the probe.

Limitations categories/zones due to accessories

For safe operation of our Ex probes for use in potentially explosive areas, we strongly recommend the accessories marked with the Ex symbol. These have been subjected to thorough safety testing in combination with our Ex probes. Bühler assumes no responsibility for explosion protection, function or conformity if accessories or components not approved by Bühler are used. The use of accessories not listed may compromise safety and is at your own risk. Statutory liability provisions remain unaffected by this.

GAS 222 models	with accessories:	ATEX + IECEx	Only ATEX	
		Gas	Dust	Gas and dust (separate zones)
		Sampling zone/operating zone		
11 Ex1, 21 Ex1, 30 Ex1, 31 Ex1, 35 Ex1, 35-U Ex1	Pressure vessel PAV 01 (item no. 46222PAV and accessories)	Zone1 ^{***} /Zone 1	Zone 20/Zone 21	Zone 20/Zone 1
11 Ex1, 21 Ex1, 30 Ex1, 31 Ex1	Deflectors for upstream filters	Zone 1/Zone 1	Zone 21/Zone 21	Zone 1/Zone 21
11 Ex1, 21 Ex1, 30 Ex1, 31 Ex1	Ceramic upstream filters* (item no.: 46222307, 46222307F, 46222307C, 46222330, 46222330C)	Zone 2/Zone 1	Zone 20/Zone 21	Zone 20/Zone 1 or Zone 2 / Zone 21
11 Ex1, 20 Ex1, 21 Ex1	Ceramic downstream filters* (item no.: 46222026 / 46222026P)	Zone 2/Zone 1	Zone 20/Zone 21	Zone 20/Zone 1 or Zone 2 / Zone 21
11 Ex1, 20 Ex1, 21 Ex1	Sampling tubes (item no.: 46222001XXXX, 46222006XXXX, 46222004XXXX, 46222016XXXX)	Zone 0/Zone 1	No zone/Zone 21	Zone 0/Zone 21
11 Ex1, 20 Ex1, 21 Ex1	Ceramic sampling tubes** (item no.: 46222002XXXX)	Zone 2/Zone 1	No zone/Zone 21	Zone 2/Zone 21

* Accessories are not suitable for sampling highly ignitable dusts with a minimum ignition energy (MIE) of < 3 mJ.

** When extracting gas from Zone 2, ceramic sampling tubes may only be used if application- and process-related electrostatic charging can be ruled out.

*** Blowback of explosive atmosphere/gases is prohibited.

General accessories

Probe models:											
Unheated/heated extension	Length [mm]	GAS 222.10	GAS 222.11	GAS 222.15	GAS 222.17	GAS 222.20	GAS 222.21	GAS 222.30	GAS 222.31	GAS 222.35	Item no.
 G 3/4 Unheated Stainless steel (1.4571)	200	•	•	•	•	•	•	•	•		4622230320200
	400	•	•	•	•	•	•	•	•		4622230320400
	500	•	•	•	•	•	•	•	•		4622230320500
	700	•	•	•	•	•	•	•	•		4622230320700
	1000	•	•	•	•	•	•	•	•		4622230321000
	1200	•	•	•	•	•	•	•	•		4622230321200
	1500	•	•	•	•	•	•	•	•		4622230321500
	2000	•	•	•	•	•	•	•	•		4622230322000
 G 1/2 Unheated Stainless steel (1.4571)	250									•	4622235910250
	500									•	4622235910500
	700									•	4622235910700
	1500									•	4622235911500
GF heated, 230 V Stainless steel (1.4571)	500					•	•		•		462223036
	1000					•	•		•		462223033
GF heated, 115 V Stainless steel (1.4571)	500					•	•		•		462223136
	1000					•	•		•		462223133
GF ANSI heated, 115 V Stainless steel (1.4571)	500					•	•		•		462223036C1
	1000					•	•		•		462223033C1
GF heated, 230 V Hastelloy	1000					•	•		•		462223033H
Blowback control											
Blowback control 24 V			•				•	•	•	•	46222199
Blowback control 115/230 V			•				•	•	•	•	46222299

 Recommended accessories for use in hazardous areas.

Tab. 1: Blowback control and extensions

Probe models:		GAS 222.10	GAS 222.11	GAS 222.15	GAS 222.17	GAS 222.20	GAS 222.21	GAS 222.30	GAS 222.31	GAS 222.35	Item no.
Sampling tubes	Length [mm]										
 Hastelloy/1.4571 ¹⁾ ø12 mm T _{max} : 400 °C	500	•	•	•	•	•	•	•	•		462220060500
	1000	•	•	•	•	•	•	•	•		462220061000
	1500	•	•	•	•	•	•	•	•		462220061500
	2000	•	•	•	•	•	•	•	•		462220062000
 Stainless steel ¹⁾ ø12 mm T _{max} : 600 °C	300	•	•	•	•	•	•	•	•		462220010300
	500	•	•	•	•	•	•	•	•		462220010500
	1000	•	•	•	•	•	•	•	•		462220011000
	1500	•	•	•	•	•	•	•	•		462220011500
	2000	•	•	•	•	•	•	•	•		462220012000
 Stainless steel ¹⁾ ø20 mm T _{max} : 600 °C	500	•	•	•	•	•	•	•	•		462220160500
	1000	•	•	•	•	•	•	•	•		462220161000
	1500	•	•	•	•	•	•	•	•		462220161500
	2000	•	•	•	•	•	•	•	•		462220162000
 Inconel/1.4571 ¹⁾ ø21 mm T _{max} : 1050 °C	500	•	•	•	•	•	•	•	•		462220040500
	1000	•	•	•	•	•	•	•	•		462220041000
	1500	•	•	•	•	•	•	•	•		462220041500
	2000	•	•	•	•	•	•	•	•		462220042000
Kanthal/1.4571 ø15 mm T _{max} : 1400 °C	500	•	•	•	•	•	•	•	•		462220170500
	1000	•	•	•	•	•	•	•	•		462220171000
	2000	•	•	•	•	•	•	•	•		462220172000
 Ceramic/1.4571 ¹⁾ ø24 mm T _{max} : 1600 °C	500	•	•	•	•	•	•	•	•		4622200205
	1000	•	•	•	•	•	•	•	•		4622200210
	1500	•	•	•	•	•	•	•	•		4622200215
 Sampling tube with demister Material: 1.4571 T _{max} : 400 °C	100	•	•	•	•	•	•	•	•		4622204201
	300	•	•	•	•	•	•	•	•		4622204203
	500	•	•	•	•	•	•	•	•		4622204205
	600	•	•	•	•	•	•	•	•		4622204206
	800	•	•	•	•	•	•	•	•		4622204208
	1000	•	•	•	•	•	•	•	•		4622204210
 Sampling tube with demister Material: Hastelloy T _{max} : 400 °C	500	•	•	•	•	•	•	•	•		4622201290500
	750	•	•	•	•	•	•	•	•		4622201290750
	1000	•	•	•	•	•	•	•	•		4622201291000
Sampling tube with demister Material: PVDF/ETFE T _{max} : 120 °C	200	•	•	•	•	•	•	•	•		462220400200
	650	•	•	•	•	•	•	•	•		462220400650
	800	•	•	•	•	•	•	•	•		46222040

1) Restrictions for the approved Ex zones for sampling and operation apply. Details can be found in the table at the beginning of the data sheet.

 Recommended accessories for use in hazardous areas.

Tab. 2: Sampling tubes

Accessories for probes with downstream filter

Probe models:								
 Downstream filter	average pore size [µm]	GAS 222.10	GAS 222.11	GAS 222.15	GAS 222.17	GAS 222.20	GAS 222.21	Item no.
 Sintered stainless steel O-ring: Viton	0,5	•	•	•	•	•	•	46222010F ⁴⁾
	5	•	•	•	•	•	•	46222010
 Sintered stainless steel O-ring: FFKM	0,5	•	•	•	•	•	•	46222010FP ⁴⁾
	5	•	•	•	•	•	•	46222010P
 Ceramic ¹⁾ O-ring: Viton	3	•	•	•	•	•	•	46222026
 Ceramic ¹⁾ O-ring: FFKM	3	•	•	•	•	•	•	46222026P
Sintered stainless steel O-ring: Viton	15	•	•	•	•	•	•	462220139
Sintered stainless steel O-ring: FFKM	15	•	•	•	•	•	•	462220139P
Micro-strand glass fibre with silicate binder O-ring: Viton (matching handle)		•	•	•	•	•	•	462220671 (46222067)
Micro-strand glass fibre with silicate binder O-ring: FFKM (matching handle)		•	•	•	•	•	•	462220671P (46222067)
Cover piece incl. tube, filter wool O-ring: Viton		•	•	•	•	•	•	46222163
Cover piece incl. tube, filter wool O-ring: FFKM		•	•	•	•	•	•	46222163P
Cover piece incl. tube, steel wool O-ring: Viton		•	•	•	•	•	•	46222163001

1) Restrictions for the approved Ex zones for sampling and operation apply. Details can be found in the table at the beginning of the data sheet.

4) Upon request.

 Recommended accessories for use in hazardous areas.

Tab. 3: Downstream filter

Accessories for probes with upstream filter

Probe models:		GAS 222.11	GAS 222.21	GAS 222.30	GAS 222.31	GAS 222.35	Item no.
 Upstream filters	average pore size [µm]						
Stainless steel/1.4404/1.4571 Length: 229 mm T _{max} : 600 °C	0,5					●	46222359F ⁴⁾
	5					●	46222359
Stainless steel/1.4571 Length: 237 mm T _{max} : 600 °C	0,5	●	●	●	●		46222303F ⁴⁾
	5	●	●	●	●		46222303
Stainless steel with displacer Length: 237 mm T _{max} : 600 °C	0,5	●	●	●	●		462223031F ⁴⁾
	5	●	●	●	●		462223031
Stainless steel/1.4571 Length: 538 mm T _{max} : 600 °C	0,5	●	●	●	●		46222304F ⁴⁾
	5	●	●	●	●		46222304
Stainless steel with displacer Length: 538 mm T _{max} : 600 °C	0,5	●	●	●	●		462223041F ⁴⁾
	5	●	●	●	●		462223041
Hastelloy Length: 237 mm T _{max} : 400 °C	0,5	●	●	●	●		46222303HF ⁴⁾
	5	●	●	●	●		46222303H
Hastelloy Length: 538 mm T _{max} : 400 °C	0,5	●	●	●	●		46222304HF ⁴⁾
	5	●	●	●	●		46222304H
Hastelloy with displacer Length: 237 mm T _{max} : 400 °C	0,5	●	●	●	●		462223031HF ⁴⁾
	5	●	●	●	●		462223031H
Hastelloy with displacer Length: 538 mm T _{max} : 400 °C	0,5	●	●	●	●		462223041HF ⁴⁾
	5	●	●	●	●		462223041H
Ceramic/1.4571 ¹⁾ Length: 478 mm T _{max} : 1000 °C	0,3	●	●	●	●		46222307F ²⁾
	2	●	●	●	●		46222307 ²⁾
	2	●	●	●	●		46222307C ^{2), 3)}
Ceramic/1.4571 ¹⁾ Length: 978 mm T _{max} : 1000 °C	2	●	●	●	●		46222330 ²⁾
	2	●	●	●	●		46222330C ^{2), 3)}
 Deflectors							
For upstream filters 03 ¹⁾		●	●	●	●		462223034
For upstream filters 04 ¹⁾		●	●	●	●		462223044

1) Restrictions for the approved Ex zones for sampling and operation apply. Details can be found in the table at the beginning of the data sheet.

2) Furnace gas filtration: oxidising atmosphere max. 750 °C, reducing atmosphere max. 600 °C;
Not suitable for extracting ignition-sensitive dusts with minimum ignition energy < 3 mJ.

3) For probes with ANSI flanges

4) Upon request.

 Recommended accessories for use in hazardous areas.

Tab. 4: Upstream filters

Probe models:		GAS 222.10	GAS 222.11	GAS 222.15	GAS 222.17	GAS 222.20	GAS 222.21	GAS 222.30	GAS 222.31	GAS 222.35	Item no.
 Accessories - fittings											
Sample gas connection for Ø 6 mm pipe		•	•	•	•	•	•	•	•	•	9029000
Sample gas connection for Ø 8 mm pipe		•	•	•	•	•	•	•	•	•	9029001
Purge gas connection Ø 12 mm pipe			•				•	•	•	•	9029002
Sample gas connection for Ø 1/4" pipe		•	•	•	•	•	•	•	•	•	9008584
Sample gas connection for Ø 3/8" pipe		•	•	•	•	•	•	•	•	•	9029011
Purge gas connection Ø 1/2" pipe			•				•	•	•	•	9008582
 Accessories – adapter flanges - selection - others upon request											
Probe	► Process										
DIN DN 65 PN 6	ANSI DN 1 1/4" 150 lb.	•	•	•	•	•	•	•	•	•	46222501
DIN DN 65 PN 6	ANSI DN 2" 150 lb.	•	•	•	•	•	•	•	•	•	46222314
DIN DN 65 PN 6	ANSI DN 2" 300 lb.	•	•	•	•	•	•	•	•	•	46222502
DIN DN 65 PN 6	ANSI DN 2 1/2" 150 lb.	•	•	•	•	•	•	•	•	•	46222068
DIN DN 65 PN 6	ANSI DN 3" 150 lb.	•	•	•	•	•	•	•	•	•	46222014
DIN DN 65 PN 6	ANSI DN 3" 300 lb.	•	•	•	•	•	•	•	•	•	46222034
DIN DN 65 PN 6	ANSI DN 4" 150 lb.	•	•	•	•	•	•	•	•	•	46222035
DIN DN 65 PN 6	DIN DN150 PN 6	•	•	•	•	•	•	•	•	•	462220140
DIN DN 65 PN 6	ANSI DN 6"-150 lb.	•	•	•	•	•	•	•	•	•	462220127
ANSI DN 3"-150 lb.	ANSI DN 4" 150 lb.	•	•	•	•	•	•	•	•	•	46222058

 Recommended accessories for use in hazardous areas.

Tab. 5: Accessories - adapter flanges, fittings

Spare parts and accessories

Probe models:	GAS 222.10	GAS 222.11	GAS 222.15	GAS 222.17	GAS 222.20	GAS 222.21	GAS 222.30	GAS 222.31	GAS 222.35	Item no.
 Downstream filter										
Filter wool	•	•	•	•	•	•				46222167
 O-ring set Viton incl. installation grease	•	•	•	•	•	•				46222012
 O-ring set LT 170 incl. installation grease	•	•	•	•	•	•				462220100011
 O-ring set FFKM incl. installation grease	•	•	•	•	•	•				46222024
Sampling tubes										
Demister ETFE $T_{\max} : 120\text{ °C}$ (matching safety pin)	•	•	•	•	•	•	•	•		462220402 (462220403)
 Demister stainless steel $T_{\max} : 400\text{ °C}$ (matching safety pin)	•	•	•	•	•	•	•	•		4611004 (462220421)
 Demister Hastelloy $T_{\max} : 400\text{ °C}$ (matching safety pin)	•	•	•	•	•	•	•	•		4622201291 (4622201292)


 Recommended accessories for use in hazardous areas.

Tab. 6: Spare parts and accessories


Dimensions

Entnahmerohre / tubes

Typ	L	ø	A	SW
01	var.	12	G3/4	36
06	var.	12	G3/4	36
08	var.	21,3	G3/4	36
12	var.	20	G3/4	36
13	var.	15	G3/4	36
14	var.	18	G3/4	36

 


Typ	L	ø	A	SW
02-0,5	500	24	G3/4	36
02-1,0	1000	24	G3/4	36
02-1,5	1500	24	G3/4	36

 


Verlängerungen / extensions

 unbeheizt / unheated
Typ L A SW
G3/4 var. G3/4 36
G1/2 var. G1/2 27





beheizt / heated

Typ	L	ø	A	B
GF	500	40	DN65 PN6	M12
GF	1000	40	DN65 PN6	M12
GF ANSI/CSA	500	40	DN3"-150	M16
GF ANSI/CSA	1000	40	DN3"-150	M16

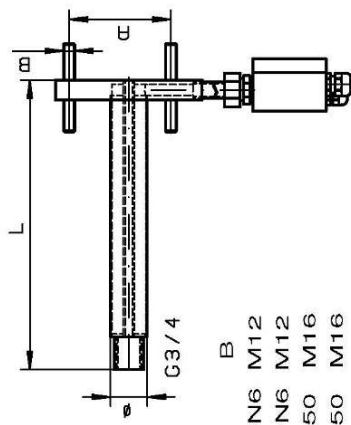


Eintrittsfilter / in-situ filters

Typ	L	ø	A	SW
03	237	51	G3/4	36
031	237	51	G3/4	36
04	538	60	G3/4	36
041	538	60	G3/4	36
35	229	29	G1/2	27

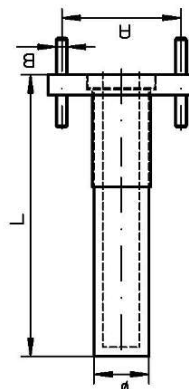 


Typ	L	ø	A	B
07	500	60	DN65 PN6	M12
07 ANSI	500	60	DN3"-150	M16

 Abweisblech / protection shield





Eintrittsfilter / in-situ filter 03

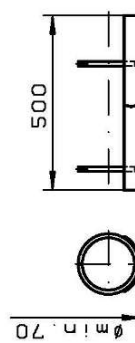



Eintrittsfilter / in-situ filter 04

ALLE KONTEN GRATIS!		Maße ohne Toleranzen nach ISO 2768-mK		Maßstab 1:5		[Gewicht]	
Oberflächenbear- beitungszeichen				Markstoff:			
✓ = ✓ _h	✓ = ✓ _h	Datum		Benennung:			
✓ = ✓ _h	✓ = ✓ _h	Bearb. 21.01.2004		Rohre/Filter/Verlängerungen			
✓ = ✓ _h	✓ = ✓ _h	Gepr.		tubes/filter/extensions			
✓ = ✓ _h	✓ = ✓ _h			GAS 222			
✓ = ✓ _h	✓ = ✓ _h			Zeichn.-Nr. 46/107-Z01-01-3A			
✓ = ✓ _h	✓ = ✓ _h			Art.-Nr.			
✓ = ✓ _h	✓ = ✓ _h			ARBEITSANLEITUNG:			
✓ = ✓ _h	✓ = ✓ _h			Zust. Rnd. Datum			
✓ = ✓ _h	✓ = ✓ _h			Name Ers für			
				BUHLER			

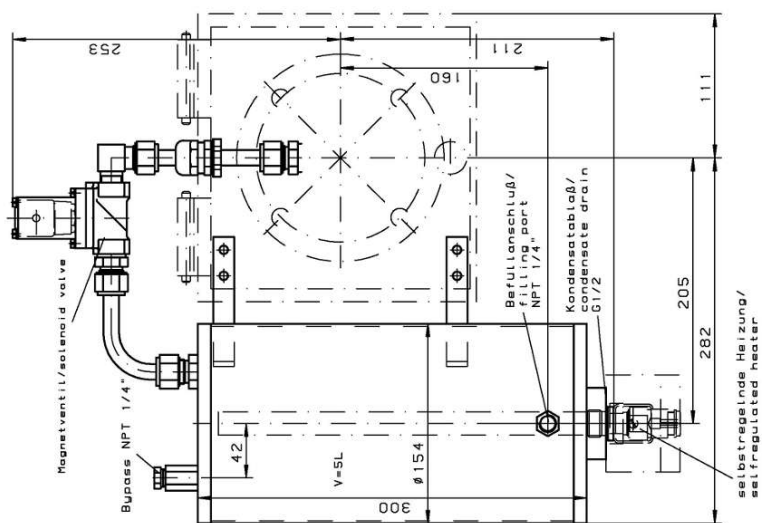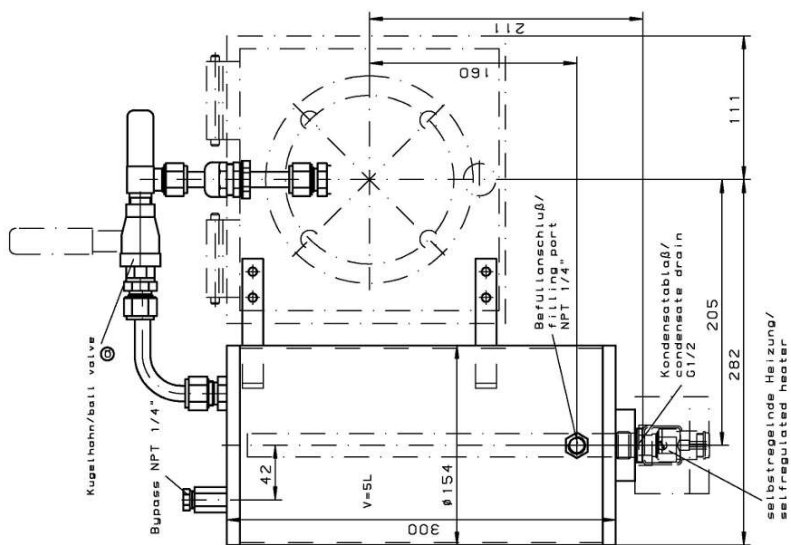

max.	Betriebsdruck/operating pressure	10bar
max.	Betriebstemperatur/operating temperature	50°C

"Änderungen nur nach Rücksprache mit dem ATEXbeauftragten zulässig"

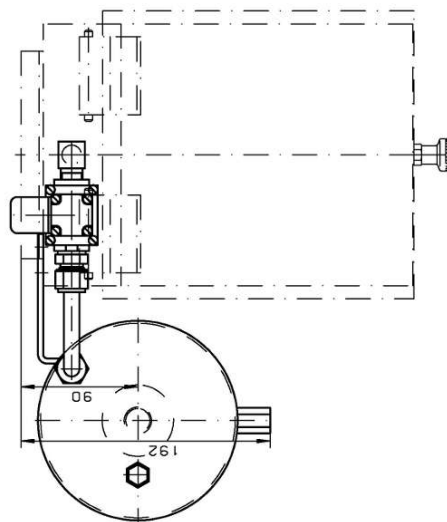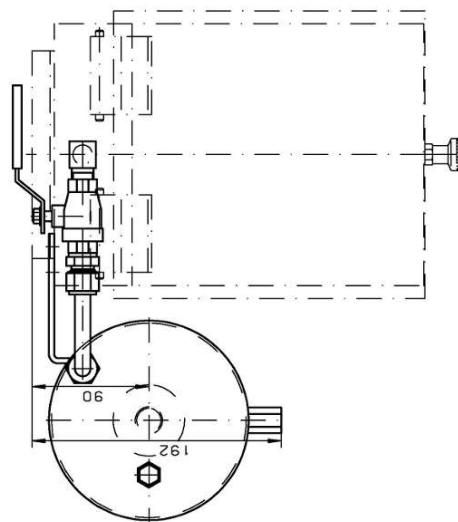[illegible]

RMA-Formular und Erklärung über Dekontaminierung

RMA-Form and explanation for decontamination



RMA-Nr./ RMA-No.

Die RMA-Nr. bekommen Sie von Ihrem Ansprechpartner im Vertrieb oder Service. Bei Rücksendung eines Altgeräts zur Entsorgung tragen Sie bitte in das Feld der RMA-Nr. "WEEE" ein./ You may obtain the RMA number from your sales or service representative. When returning an old appliance for disposal, please enter "WEEE" in the RMA number box.

Zu diesem Rücksendeschein gehört eine Dekontaminierungserklärung. Die gesetzlichen Vorschriften schreiben vor, dass Sie uns diese Dekontaminierungserklärung ausgefüllt und unterschrieben zurücksenden müssen. Bitte füllen Sie auch diese im Sinne der Gesundheit unserer Mitarbeiter vollständig aus./ This return form includes a decontamination statement. The law requires you to submit this completed and signed decontamination statement to us. Please complete the entire form, also in the interest of our employee health.

Firma/ Company

Firma/ Company

Straße/ Street

PLZ, Ort/ Zip, City

Land/ Country

Gerät/ Device

Anzahl/ Quantity

Auftragsnr./ Order No.

Ansprechpartner/ Person in charge

Name/ Name

Abt./ Dept.

Tel./ Phone

E-Mail

Serien-Nr./ Serial No.

Artikel-Nr./ Item No.

Grund der Rücksendung/ Reason for return

- ☐ Kalibrierung/ Calibration ☐ Modifikation/ Modification
☐ Reklamation/ Claim ☐ Reparatur/ Repair
☐ Elektroaltgerät/ Waste Electrical & Electronic Equipment (WEEE)
☐ andere/ other

bitte spezifizieren/ please specify

Ist das Gerät möglicherweise kontaminiert?/ Could the equipment be contaminated?

- ☐ Nein, da das Gerät nicht mit gesundheitsgefährdenden Stoffen betrieben wurde./ No, because the device was not operated with hazardous substances.
☐ Nein, da das Gerät ordnungsgemäß gereinigt und dekontaminiert wurde./ No, because the device has been properly cleaned and decontaminated.
☐ Ja, kontaminiert mit:/ Yes, contaminated with:



☐
explosiv/
explosive



☐
entzündlich/
flammable



☐
brandfördernd/
oxidizing



☐
komprimierte
Gase/
compressed
gases



☐
ätzend/
caustic



☐
giftig,
Lebensgefahr/
poisonous, risk
of death



☐
gesundheitsge-
fährdend/
harmful to
health



☐
gesund-
heitsschädlich/
health hazard



☐
umweltge-
fährdend/
environmental
hazard

Bitte Sicherheitsdatenblatt beilegen!/ Please enclose safety data sheet!

Das Gerät wurde gespült mit:/ The equipment was purged with:

Diese Erklärung wurde korrekt und vollständig ausgefüllt und von einer dazu befugten Person unterschrieben. Der Versand der (dekontaminierten) Geräte und Komponenten erfolgt gemäß den gesetzlichen Bestimmungen.

This declaration has been filled out correctly and completely, and signed by an authorized person. The dispatch of the (decontaminated) devices and components takes place according to the legal regulations.

Falls die Ware nicht gereinigt, also kontaminiert bei uns eintrifft, muss die Firma Bühler sich vorbehalten, diese durch einen externen Dienstleister reinigen zu lassen und Ihnen dies in Rechnung zu stellen.

Should the goods not arrive clean, but contaminated, Bühler reserves the right, to commission an external service provider to clean the goods and invoice it to your account.

Firmenstempel/ Company Sign

Datum/ Date

rechtsverbindliche Unterschrift/ Legally binding signature



Vermeiden von Veränderung und Beschädigung der einzusendenden Baugruppe

Die Analyse defekter Baugruppen ist ein wesentlicher Bestandteil der Qualitätssicherung der Firma Bühler Technologies GmbH. Um eine aussagekräftige Analyse zu gewährleisten muss die Ware möglichst unverändert untersucht werden. Es dürfen keine Veränderungen oder weitere Beschädigungen auftreten, die Ursachen verdecken oder eine Analyse unmöglich machen.

Umgang mit elektrostatisch sensiblen Baugruppen

Bei elektronischen Baugruppen kann es sich um elektrostatisch sensible Baugruppen handeln. Es ist darauf zu achten, diese Baugruppen ESD-gerecht zu behandeln. Nach Möglichkeit sollten die Baugruppen an einem ESD-gerechten Arbeitsplatz getauscht werden. Ist dies nicht möglich sollten ESD-gerechte Maßnahmen beim Austausch getroffen werden. Der Transport darf nur in ESD-gerechten Behältnissen durchgeführt werden. Die Verpackung der Baugruppen muss ESD-konform sein. Verwenden Sie nach Möglichkeit die Verpackung des Ersatzteils oder wählen Sie selber eine ESD-gerechte Verpackung.

Einbau von Ersatzteilen

Beachten Sie beim Einbau des Ersatzteils die gleichen Vorgaben wie oben beschrieben. Achten Sie auf die ordnungsgemäße Montage des Bauteils und aller Komponenten. Versetzen Sie vor der Inbetriebnahme die Verkabelung wieder in den ursprünglichen Zustand. Fragen Sie im Zweifel beim Hersteller nach weiteren Informationen.

Einsenden von Elektroaltgeräten zur Entsorgung

Wollen Sie ein von Bühler Technologies GmbH stammendes Elektroprodukt zur fachgerechten Entsorgung einsenden, dann tragen Sie bitte in das Feld der RMA-Nr. „WEEE“ ein. Legen Sie dem Altgerät die vollständig ausgefüllte Dekontaminierungserklärung für den Transport von außen sichtbar bei. Weitere Informationen zur Entsorgung von Elektroaltgeräten finden Sie auf der Webseite unseres Unternehmens.

Avoiding alterations and damage to the components to be returned

Analysing defective assemblies is an essential part of quality assurance at Bühler Technologies GmbH. To ensure conclusive analysis the goods must be inspected unaltered, if possible. Modifications or other damages which may hide the cause or render it impossible to analyse are prohibited.

Handling electrostatically conductive components

Electronic assemblies may be sensitive to static electricity. Be sure to handle these assemblies in an ESD-safe manner. Where possible, the assemblies should be replaced in an ESD-safe location. If unable to do so, take ESD-safe precautions when replacing these. Must be transported in ESD-safe containers. The packaging of the assemblies must be ESD-safe. If possible, use the packaging of the spare part or use ESD-safe packaging.

Fitting of spare parts

Observe the above specifications when installing the spare part. Ensure the part and all components are properly installed. Return the cables to the original state before putting into service. When in doubt, contact the manufacturer for additional information.

Returning old electrical appliances for disposal

If you wish to return an electrical product from Bühler Technologies GmbH for proper disposal, please enter "WEEE" in the RMA number box. Please attach the fully completed decontamination declaration form for transport to the old appliance so that it is visible from the outside. You can find more information on the disposal of old electrical appliances on our company's website.

