

Table of Contents

1	Introduction	3
1.1	Intended Use	3
1.2	Type Plate	3
1.3	Scope of Delivery	3
1.4	Ordering Instructions	4
1.5	Product Description	5
2	Safety instructions	6
2.1	Important advice	6
2.2	General hazard warnings	7
3	Transport and storage	8
4	Installation and connection	9
4.1	Installation site requirements	9
4.2	Installing the sampling tube (optional)	9
4.3	Installing the downstream filter (optional)	9
4.4	Installing the upstream filter (Optional)	9
4.5	Insulation	9
4.6	Connecting the Gas Line	10
4.6.1	Blowback Connection	10
4.6.2	Connecting the Gas Line	11
4.6.3	Connecting the calibrating gas line (optional)	11
4.7	Connecting the Blowback and Pressure Vessel (Optional)	11
4.8	Electrical connections	12
4.8.1	Connection via Terminal Strip	12
4.8.2	Heated Pressure Vessel (Optional)	12
4.8.3	Heated Extension (Optional)	12
5	Operation and Control	13
5.1	Basic function of the probe controller	13
5.1.1	Regulator Functions	13
5.1.2	Advanced Functions with Built-In Regulator for Heated Extension (Optional)	13
5.1.3	Advanced functions for built-in blowback control (optional)	13
5.1.4	Additional Board for Solenoid Valves and Limit Switches (SV Board Option)	13
5.2	Use of menu functions	14
5.2.1	Menu Navigation Overview	15
5.2.2	Detailed description of the operational principle	16
5.3	Description of menu functions	16
5.3.1	Main Menu	16
5.3.2	Probe Controller Submenu [Display: Prob]	17
5.3.3	Regulator Submenu for Heated Extension [Display: Adon] (Optional)	17
5.3.4	Submenu Blowback control [Display: bbc] (optional)	18
6	Maintenance	19
6.1	Maintaining the filter element	20
6.1.1	Replacing the downstream filter	20
6.1.2	Replacing the Outlet Filter with Micro-Fibreglass Filter Element	21
6.1.3	Replacing the upstream filter	21
6.2	Inlet filter blowback (within the process stream)	22
6.2.1	Manual Blowback (Without Blowback Control)	22
6.2.2	Automatic Blowback (External Blowback Control)	22
6.2.3	Built-In Blowback Control (Optional)	23
7	Service and repair	24
7.1	Troubleshooting	25
7.2	Spare Parts	25
8	Disposal	26
9	Appendices	27
9.1	Technical Data	27

9.2	Flow chart	27
9.3	Dimensions	28
9.4	Dimensions (ANSI flange)	29
9.5	Connection Diagram	30
9.6	Connection diagram heated pressure vessel.....	31
9.7	User book (Please make copies).....	32
10	Attached Documents.....	33