

Table of Contents

1	Introduction	3
1.1	Intended Use	3
1.2	Type Plate	3
1.3	Scope of Delivery	3
1.4	Ordering Instructions	4
1.5	Product Description	5
2	Safety instructions	6
2.1	Important advice	6
2.2	General hazard warnings	7
3	Transport and storage	8
4	Installation and connection	9
4.1	Installation site requirements	9
4.2	Installing the upstream filter	9
4.3	Insulation	9
4.4	Connecting the Gas Line	9
4.4.1	Blowback Connection	10
4.4.2	Connecting the Gas Line	10
4.4.3	Connecting the calibrating gas line (optional)	10
4.5	Connecting the Blowback and Pressure Vessel (Optional)	10
4.6	Electrical connections	11
4.6.1	Connection via Terminal Strip	11
4.6.2	Heated Pressure Vessel (Optional)	11
4.6.3	Heated Extension (Optional)	11
5	Operation and Control	12
5.1	Basic function of the probe controller	12
5.1.1	Regulator Functions	12
5.1.2	Advanced Functions with Built-In Regulator for Heated Extension (Optional)	12
5.1.3	Advanced functions for built-in blowback control (optional)	12
5.2	Use of menu functions	13
5.2.1	Menu Navigation Overview	14
5.2.2	Detailed description of the operational principle	15
5.3	Description of menu functions	15
5.3.1	Main Menu	15
5.3.2	Probe Controller Submenu [Display: Prob]	16
5.3.3	Regulator Submenu for Heated Extension [Display: Adon] (Optional)	16
5.3.4	Submenu Blowback control [Display: bbc] (optional)	17
6	Maintenance	18
6.1	Replacing the upstream filter	19
6.2	Inlet filter blowback (within the process stream)	20
6.2.1	Manual Blowback (Without Blowback Control)	20
6.2.2	Automatic Blowback (External Blowback Control)	20
6.2.3	Built-In Blowback Control (Optional)	21
7	Service and repair	22
7.1	Troubleshooting	23
7.2	Spare Parts	23
8	Disposal	24
9	Appendices	25
9.1	Technical Data	25
9.2	Flow chart	25
9.3	Dimensions	26
9.4	Dimensions (ANSI flange)	27
9.5	Connection Diagram	28
9.6	Connection diagram heated pressure vessel	29

9.7	User book (Please make copies).....	30
10	Attached Documents.....	31