





ModbusRTU



# Sample gas cooler RC 1.1 with -H2/-O2 heat exchanger

When powerful cooling is required, the RC 1.1 compressor sample gas cooler with -H2/-O2 heat exchanger is the ideal solution for reliable cooling of hydrogen ( $H_2$ ) and oxygen ( $O_2$ ) in extractive gas analysis. Green hydrogen produced by electrolysis using renewable energy sources is the key to a sustainable, emission-free future in the energy industry.

The safe, reliable cooling of the sample gas is decisive for gas analytics in the electrolyser (e.g. for LEL monitoring), as a higher moisture content is to be expected with some processes. The moisture in the process gas can damage the sensitive measuring cells in the analyser, so the gas temperature is kept below gas dew point at all times, thus causing the moisture to be emitted. The condensate is discharged via an automatic condensate drain.

As well as material-refining measures to prevent hydrogen-induced component damage, the heat exchangers for the  $\rm H_2$  series are subjected to a leak test using helium. For the  $\rm O_2$  version, special cleaning processes are used to remove particles, oils and fats from parts coming into contact with media. The contamination limits are based on the internationally used and applicable guideline EIGA Doc 33/18 "Cleaning of Equipment for Oxygen Service".

For applications with high-purity hydrogen or oxygen

Cleaning standard is based on EIGA Doc 33/18 as regards the absence of particles, oils and fats for heat exchangers with the  $O_2$  version

Materials in contact with media are suitability-tested for high  $H_2$  and  $O_2$  concentrations

Heat exchanger leak tests using helium are performed on the  $\mathrm{H}_2$  series as standard

Nominal cooling capacity 341 Btu/h

Constant dew point stability ± 0.2 °F

Adjustable outlet dew point and alarm thresholds

Cooling block temperature display

Buhler Technologies LLC, 1030 West Hamlin Road, Rochester Hills, MI 48309 Phone: 248.652.1546, Fax: 248.652.1598

> e-mail: sales@buhlertech.com Internet: www.buhlertech.com

Optional 4 - 20 mA or Modbus RTU signal output



#### Overview

The RC 1.1 with -H2/-O2 heat exchanger series was specially developed for use with high-purity hydrogen and oxygen. We also offer different signal outputs:

- Status output,
- Analog output, 4...20 mA, incl. status output,
- Modbus RTU digital output, incl. status output.

#### Gas cooler technical data


Gas cooler technical data					
Ready for operation	after max. 15 minutes	after max. 15 minutes			
Rated cooling capacity (at 77 °F)	341 Btu/h				
ambient temperature	41 °F to 122 °F	41 °F to 122 °F			
Gas outlet dew point					
preset:	41 °F				
adjustable:	37 °F to 68 °F	37 °F to 68 °F			
Dew point fluctuations					
static:	± 0.1 K	± 0.1 K			
in the entire specification range:	± 1.5 K	± 1.5 K			
IP rating	IP 20				
Housing	Stainless steel	Stainless steel			
Packaging dimensions	approx. 16.5 x 17.3 x 13.8 in				
Weight incl. heat exchanger	approx. 35.2 lb				
Electric supply	115 V, 60 Hz or 230 V, 50/60 Hz ± 5% Plug per DIN EN 175301-803				
Electrical data		230 V	115 V		
	Typical power input:	396 VA	402 VA		
	max. operating current:	2.5 A	5 A		
Alarm output switching connection	max. 250 V, 2 A, 50 VA Connector per DIN EN 175301-803				
Installation	stand-alone or wall-mounted				

## **Technical Data - Options**

#### Analogue Output Cooler Temperature Technical Data

Signal	4-20 mA or 2-10 V corresponds to -4 °F to 140 °F cooler temperature	
Connection	M12x1 plug, DIN EN 61076-2-101	
D 1		
Digital interface technical dat	d.	
Signal	Modbus RTU (RS-485)	

#### Performance data

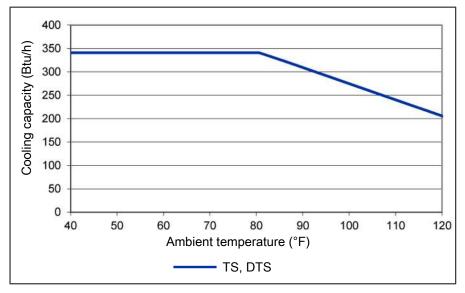

Note: The limit curves for the heat exchangers exchanger apply to a dew point of 149 °F.

#### Heat exchanger description

The energy content of the sample gas and the required cooling capacity of the gas cooler is determined by three parameters: gas temperature  $\vartheta_G$ , (inlet) dew point  $\tau_e$  (moisture content) and volume flow v. The outlet dew point rises with increasing energy content of the gas. The approved energy load from the gas is therefore determined by the tolerated rise in the dew point.

The following limits are specified for a normal standard operating point of  $\tau_e$  = 149 °F and  $\vartheta_G$  = 194 °F. The maximum volume flow  $v_{max}$  in NI/h of cooled air is indicated, so after moisture has condensed.

If the values fall below  $\tau_e$  and  $\vartheta_G$ , the flow  $v_{max}$  may be increased. For example, on the TG heat exchanger the parameter triple  $\tau_e = 149 \, ^{\circ}\text{F}$ ,  $\vartheta_G = 194 \, ^{\circ}\text{F}$  and  $v = 4.7 \, \text{lpm}$  may also be used in place of  $\tau_e = 122 \, ^{\circ}\text{F}$ ,  $\vartheta_G = 176 \, ^{\circ}\text{F}$  and  $v = 6.3 \, \text{lpm}$ .

Please contact our experts for clarification or refer to our design program.


#### Heat exchanger overview


Heat exchanger	TS-H2/-O2 TS-I-H2/-O2 <sup>2)</sup>	DTS-H2/-O2 DTS-I-H2/-O2 <sup>2)</sup>
Materials in contact with media	Stainless steel	Stainless steel
Flow rate v <sub>max</sub> 1)	8.9 lpm	2 x 4.2 lpm
Inlet dew point T <sub>e,max</sub> 1)	175 °F	175 °F
Gas inlet temperature $\vartheta_{\scriptscriptstyle G,max}^{\scriptscriptstyle 1)}$	356 °F	356 °F
Max. cooling capacity Q <sub>max</sub>	427 Btu/h	427 Btu/h
Gas pressure p <sub>max</sub>	22 psi	22 psi
Pressure drop Δp (v=2.5 lpm)	0.12 psi	0.1 psi each
Dead volume V <sub>dead</sub>	4.2 cu. in.	1.7/1.5 cu. in.
Gas connections (metric)	G1/4	6 mm tube
Gas connections (US)	NPT 1/4"	1/4" tube
Condensate out connection (metric)	G3/8	Tube 10 mm (6 mm)
Condensate out connection (US)	NPT 3/8"	3/8" tube


<sup>1)</sup> Max. cooling capacity of the cooler must be considered.

<sup>&</sup>lt;sup>2)</sup> Models marked I have NPT threads or US tubes.

## Dimensions

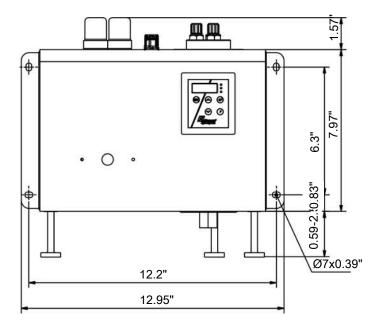

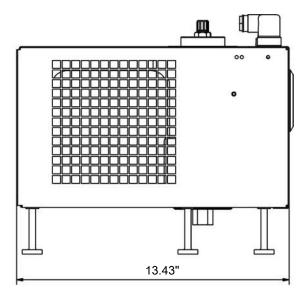

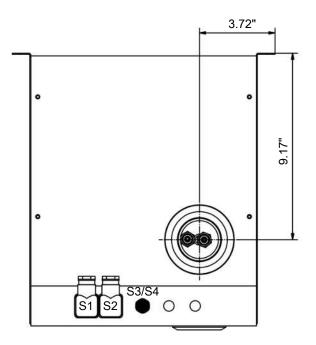

S1 = Electric supply

S2 = Alarm contact

S3 = Analog/digital output (optional)

## **Ordering instructions**

## Gas cooler for H2/O2 applications

The item number is a code for the configuration of your unit. Please use the following model code:

4596 2 1 1 0	X	х	x 0 0	00	x 0 0	000	Χ	Product Characteristics
								Supply voltage
	1							115 V, 60 Hz
	2							230 V, 50/60 Hz
								Heat exchanger
		1 1	0				-02	Stainless steel, TS-O2, metric
		1 1	5				-02	Stainless steel, TS-I-O2, US
		1 1	0				-H2	Stainless steel, TS-H2, metric
		1 1	5				-H2	Stainless steel, TS-I-H2, US
		2 6	0				-02	Stainless steel, DTS-O2, metric
		2 6	5				-02	Stainless steel, DTS-I-O2, US
		2 6	0				-H2	Stainless steel, DTS-H2, metric
		2 6	5				-H2	Stainless steel, DTS-I-H2, US
								Signal outputs
				(	0 0			status output only
				-	1 0			Analog output, 420 mA, incl. status output
				2	2 0			Modbus RTU digital output, incl. status output

## Spare parts and accessories for cooler with -H2/-O2 heat exchanger

Item no.	Description
4410001 (see data sheet 450005)	Automatic condensate drain 11 LD V 38 <sup>1)</sup>
4410001-O2 (see data sheet 450005)	Automatic condensate drain 11 LD V 38 optimised for oxygen
see data sheet 400016	Stainless steel pipe fittings for high-purity oxygen applications

<sup>&</sup>lt;sup>1)</sup> For use with high hydrogen concentrations max. 22 psi overpressure.