


10 Documentación adjunta

- Diseño de repuestos y montaje: 42/018-Z03-01-2
- Declaración de conformidad: KX420009
- Certificados: FM16NCA0008, FM16NUS0017
- RMA - Declaración de descontaminación

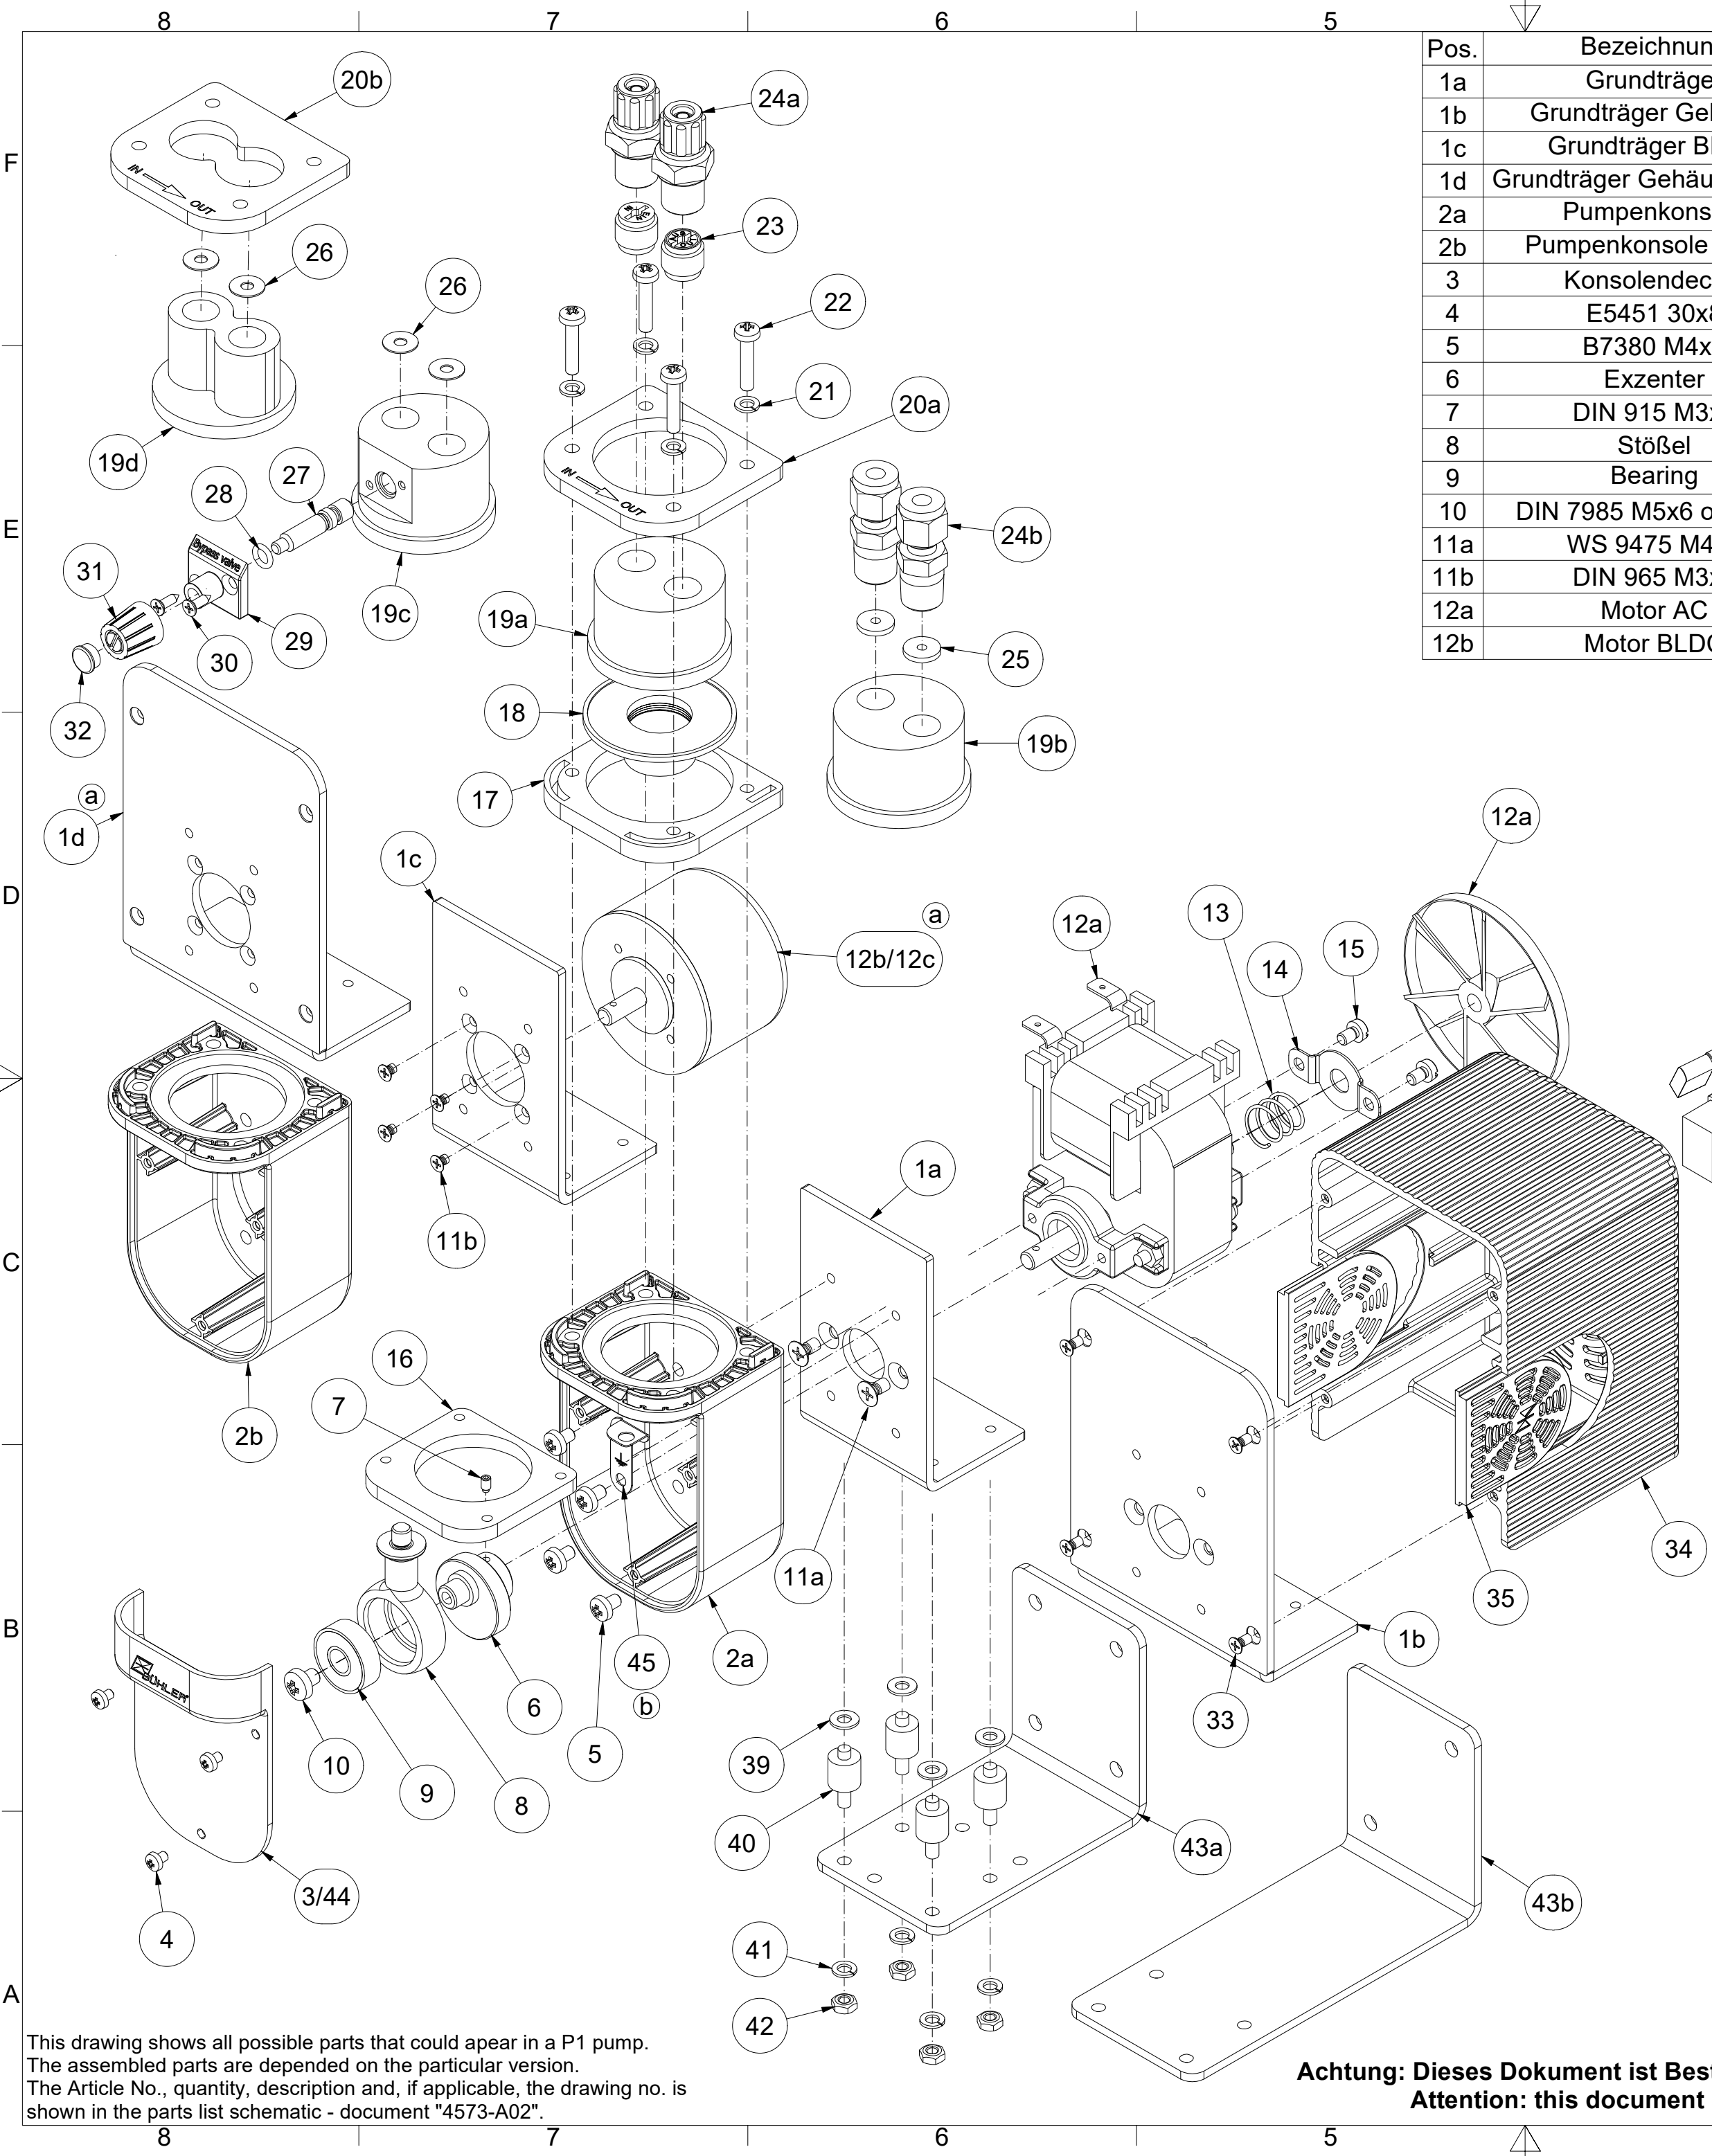

Pos.	Bezeichnung	Description	Pos.	Bezeichnung	Description
1a	Grundträger	base angel	12c	Motor BLDC mit Stecker	motor bldc with plug
1b	Grundträger Gehäuse	base angel enclosure	13	Feder	spring
1c	Grundträger BLDC	base angel bldc	14	Erdungsblech	protective ground sheet
1d	Grundträger Gehäuse BLDC	base angel enclosure bldc	15	DIN 85 M4x6	DIN 85 M4x6
2a	Pumpenkonsole	pump console	16	Gegenring	counter ring
2b	Pumpenkonsole BLDC	pump console bldc	17	Abdeckung	cover
3	Konsolendeckel	cover	18	Faltenbalg	bellow
4	E5451 30x8	E5451 30x8	19a	Pumpenkörper PTFE	pump head PTFE
5	B7380 M4x6	B7380 M4x6	19b	Pumpenkörper VA	pump head SS
6	Exzenter	Eccentric	19c	Pumpenkörper PVDF Bypass	pump head PVDF bypass
7	DIN 915 M3x5	DIN 915 M3x5	19d	Pumpenkörper PVDF	pump head PVDF
8	Stößel	Plunger	20a	Befestigungsring	mounting ring
9	Bearing	Kugellager	20b	Befestigungsring nur PVDF Körper	mounting ring only PVDF head
10	DIN 7985 M5x6 or M5x8	DIN 7985 M5x6 or M5x8	21	DIN 127 B4,1 oder DIN 6796	DIN 127 B4,1 or DIN 6796
11a	WS 9475 M4x8	WS 9475 M4x8	22	B7380 M4x20	B7380 M4x20
11b	DIN 965 M3x6	DIN 965 M3x6	23	Ein- Auslassventil	In- Outletvalve
12a	Motor AC	motor AC	24a	Verschraubung PVDF	Fitting PVDF
12b	Motor BLDC	motor bldc	24b	Verschraubung VA	Fitting SS

25	Verdränger	displacer
26	Dichtscheibe	valve sealing
27	Spindel	spindle
28	O-Ring	o-ring
29	Ventilplatte	valve plate
30	DIN 7982 2,9x9,5	DIN 7982 2,9x9,5
31	Drehknopf	knob
32	Abdeckung	cover
33	E5454 30x8	E5454 30x8
34	Gehäuseteil 1	enclosure part 1
35	Gehäuseteil 2	enclosure part 2
36	Kabelverschraubung	cable gland
37	Blindstopfen	dummy plug
38	Anschlusskabel	connection cable
38a	Anschlusskabel BLDC	connection cable bldc
39	DIN 125 A4,3	DIN 125 A4,3
40	Gummi Puffer	vibration damper
41	DIN 127 B4,1 oder DIN 6796	DIN 127 B4,1 or DIN 6796
42	DIN 934 M4	DIN 934 M4
43a	Montagekonsole	Mounting console
43b	Montagekonsole Gehäuse	Mounting console enclosure
44	Konsolendeckel mit Lüftungsschlitzen	Cover with ventilation slots
45	Potentialausgleichsblech	Equipotential bonding sheet

Ersatzteile / Spare parts			
Bezeichnung	Description	Artikel Nr. / Article no.	Pos.Nr. / Pos. no.
Kurbeltrieb	crank assembly	4228065	6/7/8/9/10
Faltenbalg	bellow	4228003	18
Ventil 70°C (1 Stück)	Valve 70°C (1 piece)	4228006	23
Ventil 70°C (2 Stück)	Valve 70°C (2 Stück)	4228066	23/26
O-Ring	O-ring	9009398	28
Montagekonsole	Mounting console	4228060	43a
Montagekonsole Gehäuse	Mounting console enclosure	4228067	43b
Pufferset	Damper set	4228061	39/40/41/42
Montagekonsole & Pufferset	Mounting console & damper set	4228062	39/40/41/42/43a
Montagekonsole & Pufferset	Mounting console & damper set	4228063	39/40/41/42/43b

This drawing shows all possible parts that could appear in a P1 pump.
The assembled parts are depended on the particular version.
The Article No., quantity, description and, if applicable, the drawing no. is shown in the parts list schematic - document "4573-A02".

Achtung: Dieses Dokument ist Bestandteil der FM-Zulassung
Attention: this document is part of the FM-Approval

Alle Kanten gratfrei	Alle Rechte vorbehalten	Maße ohne Toleranzangabe nach ISO 2768-mK	Maßstab: 1:1,6	Masse:
✓ = √ R0h		Datum: 13.10.2015	Werkstoff:	
✓/ = √ Rz 63		Name: Sundergeld	Benennung: Exploded view of the P1.x Pumps	
✓ = √ Rz 16		Bearb. 24.10.19	ZeichnungsNr.: 42/018-Z03-01-2B	
✓ = √ Rz 4		Gepr.	Art.Nr.: 42...	
			Arbeitsanweisung:	

EG-/EU Konformitätserklärung
EC/EU Declaration of Conformity



Hiermit erklärt Bühler Technologies GmbH,
dass die nachfolgenden Produkte den
wesentlichen Anforderungen der Richtlinie

2006/42/EG
(MRL)

in ihrer aktuellen Fassung entsprechen.

Die Produkte sind Maschinen nach Artikel 2 a).

*Herewith declares Bühler Technologies GmbH
that the following products correspond to the
essential requirements of Directive*

2006/42/EC
(MD)

in its actual version.

*The products are machines according to
article 2 (a).*

Produkt / products: Messgaspumpe / Sample gas pump
Typ / type: P 1.x

Das Betriebsmittel ist für den Einbau in Gasanalysesystemen bestimmt und für das Fördern von
ausschließlich gasförmigen Medien vorgesehen.

*The equipment is designed for installation in gas analyser systems and is designed to transport only
gaseous media.*

Das oben beschriebene Produkt der Erklärung erfüllt die einschlägigen
Harmonisierungsrechtsvorschriften der Union:

*The object of the declaration described above is in conformity with the relevant Union harmonisation
legislation:*

EN 809:1998+A1:2009 + AC:2010

EN 60204-1:2018

Zusätzlich wurden berücksichtigt:
In addition, the following standards have been used:
EN ISO 12100:2010

Die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung trägt der Hersteller.
This declaration of conformity is issued under the sole responsibility of the manufacturer.

Dokumentationsverantwortlicher für diese Konformitätserklärung ist Herr Stefan Eschweiler mit
Anschrift am Firmensitz.

*The person authorised to compile the technical file is Mr. Stefan Eschweiler located at the company's
address.*

Ratingen, den 15.09.2022

Stefan Eschweiler
Geschäftsführer – Managing Director

Frank Pospiech
Geschäftsführer – Managing Director

UK Declaration of Conformity



The manufacturer Bühler Technologies GmbH declares, under the sole responsibility, that the product complies with the requirements of the following UK legislation:

Machinery Safety Regulations 2008

Product: Sample gas pump

Type: P 1.x

The equipment is designed for installation in gas analyser systems and is designed to transport only gaseous media.

The object of the declaration described above is in conformity with the relevant designated standards:

EN 809:1998+A1:2009 + AC:2010

EN 60204-1:2018

In addition, the following standards have been used:

EN ISO 12100:2010

Ratingen in Germany, 01.11.2022

A handwritten signature in blue ink, appearing to read 'Stefan Eschweiler'.

Stefan Eschweiler
Managing Director

A handwritten signature in blue ink, appearing to read 'Frank Pospiech'.

Frank Pospiech
Managing Director



Member of the FM Global Group

FM Approvals
1151 Boston Providence Turnpike
P.O. Box 9102 Norwood, MA 02062 USA
T: 781 762 4300 F: 781-762-9375 www.fmapprovals.com

CERTIFICATE OF COMPLIANCE

ELECTRICAL EQUIPMENT PER CANADIAN REQUIREMENTS

This certificate is issued for the following equipment:

4228abc1def00FM. P1.1 Sample Gas Pump.

a = Motor voltage: 1, 2, 3 or 4.
b = Pump head position: 1 or 2.
c = Pump head material: 1, 2, 3 or 4.
d = Screw-in connections / pipe fitting: 0, 1, 2, 3, 5 or 6.
e = Mounting accessories: 0, 1 or 2.
f = Housing: 0, 1 or 2.

Equipment Ratings:

Electrical Equipment for use indoor unclassified or Ordinary locations.

FM Approved for:

Bühler Technologies GmbH
Ratingen, Germany

To verify the availability of the Approved product, please refer to www.approvalguide.com

This certifies that the equipment described has been found to comply with the following Approval Standards and other documents:

CAN C22.2 No. 213	2012
CAN C22.2 No. 1010.1	2004

Original Project ID: 3057155CGP

Approval Granted: April 11, 2016

Subsequent Revision Reports / Date Approval Amended

Report Number	Date	Report Number	Date
---------------	------	---------------	------

FM Approvals LLC



J.E. Marquedant
Manager, Electrical Systems

11 April 2016

Date

To verify the availability of the Approved product, please refer to www.approvalguide.com

CERTIFICATE OF CONFORMITY



1. **ELECTRICAL EQUIPMENT PER CANADIAN REQUIREMENTS**

2. **Certificate No:** FM16NCA0008

3. **Equipment:** P1.1 Sample Gas Pumps
(Type Reference and Name)

4. **Name of Listing Company:** Bühler Technologies GmbH

5. **Address of Listing Company:** Harkortstraße 29
40880, Ratingen, Germany

6. The examination and test results are recorded in confidential report number:

3057155 dated 11th April 2016

7. FM Approvals LLC, certifies that the equipment described has been found to comply with the following Approval standards and other documents:

CSA-C22.2 No. 213:2012, CAN/CSA-C22.2 No. 61010-1:2004

8. This certificate relates to the design, examination and testing of the products specified herein. The FM Approvals surveillance audit program has further determined that the manufacturing processes and quality control procedures in place are satisfactory to manufacture the product as examined, tested and Approved.

9. **Equipment Ratings:**

Electrical equipment for use indoor unclassified or Ordinary locations

Certificate issued by:

J. E. Marquedant
Manager, Electrical Systems

9 December 2016

Date

To verify the availability of the Approved product, please refer to www.approvalguide.com

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC, 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA

T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmapprovals.com www.fmapprovals.com

SCHEDULE



to Canadian Certificate Of Conformity No: FM16NCA0008

10. Description of Equipment:

The P1 sample gas pumps carry gases from various processes to analyzers. The gas circuit typically has additional analysis components such as sample gas probe, filter, flow meter, cooler, etc. The sample gas pump P1 consists of the main components, the pump head and motor. An eccentric converts the rotation of the motor into an up and down motion using a connecting rod, thus producing the pump mechanism. Inside the so-called pump body, above the bellows, which facilitates the pump motion, are inlet and outlet valves. The user connects the gas circuits to the sample gas pump through screw-in connections.

The P1 sample gas pumps are available as 12Vdc, 24Vdc, 115Vac, 60Hz or 230Vac, 50Hz. The 115Vac and 230Vac sample gas pumps are available with or without a cover over the electronics and motor. The 115Vac and 230Vac sample gas pumps have internal self resetting thermal protection built into the motor. The P1.1 sample gas pump is for general purpose non-hazardous locations.

Model Code Structure:

4228abc1def00FM. P1.1 Sample Gas Pump.

a = Motor voltage: 1, 2, 3 or 4.

b = Pump head position: 1 or 2.

c = Pump head material: 1, 2, 3 or 4.

d = Screw-in connections / pipe fitting: 0, 1, 2, 3, 5 or 6.

e = Mounting accessories: 0, 1 or 2.

f = Housing: 0 or 1

11. Test and Assessment Procedure and Conditions:

This Certificate has been issued in accordance with FM Approvals Canadian Certification Requirements.

12. Schedule Drawings

A copy of the technical documentation has been kept by FM Approvals.

13. Certificate History

Details of the supplements to this certificate are described below:

Date	Description
11 th April 2016	Original Issue.
9 th December 2016	<u>Supplement 1:</u> Report Reference: – RR207245 dated 9 th December 2016 Description of the Change: Changes per this revision request are for the NI version of the product and don't affect this certificate. This certificate has been put into the new format.

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC. 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA

T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmaprovals.com www.fmaprovals.com

CERTIFICATE OF CONFORMITY



1. **ELECTRICAL EQUIPMENT PER CANADIAN REQUIREMENTS**

2. **Certificate No:** FM16NCA0008

3. **Equipment:** P1.1 Sample Gas Pumps
(Type Reference and Name)

4. **Name of Listing Company:** Bühler Technologies GmbH

5. **Address of Listing Company:** Harkortstraße 29
40880, Ratingen, Germany

6. The examination and test results are recorded in confidential report number:

3057155 dated 11th April 2016

7. FM Approvals LLC, certifies that the equipment described has been found to comply with the following Approval standards and other documents:

CSA-C22.2 No. 213:2012, CAN/CSA-C22.2 No. 61010-1:2004

8. This certificate relates to the design, examination and testing of the products specified herein. The FM Approvals surveillance audit program has further determined that the manufacturing processes and quality control procedures in place are satisfactory to manufacture the product as examined, tested and Approved.

9. **Equipment Ratings:**

Electrical equipment for use indoor unclassified or Ordinary locations

Certificate issued by:

J.E. Marquedant
VP, Manager - Electrical Systems

2 April 2020

Date

To verify the availability of the Approved product, please refer to www.approvalguide.com

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC. 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA
T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmaprovals.com www.fmaprovals.com

SCHEDULE



to Canadian Certificate Of Conformity No: FM16NCA0008

10. Description of Equipment:

The P1 sample gas pumps carry gases from various processes to analyzers. The gas circuit typically has additional analysis components such as sample gas probe, filter, flow meter, cooler, etc. The sample gas pump P1 consists of the main components, the pump head and motor. An eccentric converts the rotation of the motor into an up and down motion using a connecting rod, thus producing the pump mechanism. Inside the so-called pump body, above the bellows, which facilitates the pump motion, are inlet and outlet valves. The user connects the gas circuits to the sample gas pump through screw-in connections.

The P1 sample gas pumps are available as 12Vdc, 24Vdc, 115Vac, 60Hz or 230Vac, 50Hz. The 115Vac and 230Vac sample gas pumps have internal self resetting thermal protection built into the motor. The P1.1 sample gas pump is for general purpose non-hazardous locations.

Model Code Structure:

4228abc1def00FM. P1.1 Sample Gas Pump.

a = Motor voltage: 1, 2, 3 or 4.

b = Pump head position: 1 or 2.

c = Pump head material: 1, 2, 3 or 4.

d = Screw-in connections / pipe fitting: 0, 1, 2, 3, 5 or 6.

e = Mounting accessories: 0, 1 or 2.

f = Housing: 0 or 1

11. Test and Assessment Procedure and Conditions:

This Certificate has been issued in accordance with FM Approvals Canadian Certification Requirements.

12. Schedule Drawings

A copy of the technical documentation has been kept by FM Approvals.

13. Certificate History

Details of the supplements to this certificate are described below:

Date	Description
11 th April 2016	Original Issue.
9 th December 2016	<u>Supplement 1:</u> Report Reference: – RR207245 dated 9 th December 2016. Description of the Change: Changes per this revision request are for the NI version of the product and don't affect this certificate. This certificate has been put into the new format.
2 nd April 2020	<u>Supplement 2:</u> Report Reference: – PR455937 dated 2 nd April 2020.

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC. 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA

T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmaprovals.com www.fmaprovals.com

SCHEDULE



to Canadian Certificate Of Conformity No: FM16NCA0008

Date	Description
	Description of the Change: Add option for gas pump cover DC motors.

FM Approvals

FM Approvals

FM Approvals

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC. 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA
T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmaprovals.com www.fmaprovals.com



Member of the FM Global Group

FM Approvals
1151 Boston Providence Turnpike
P.O. Box 9102 Norwood, MA 02062 USA
T: 781 762 4300 F: 781-762-9375 www.fmapprovals.com

CERTIFICATE OF COMPLIANCE

ELECTRICAL EQUIPMENT

This certificate is issued for the following equipment:

4228abc1def00FM. P1.1 Sample Gas Pump.

a = Motor Voltage: 1, 2, 3 or 4.
b = Pump head position: 1 or 2.
c = Pump head material: 1, 2, 3 or 4.
d = Screw-in connections / pipe fitting: 0, 1, 2, 3, 5 or 6.
e = Mounting accessories: 0, 1 or 2.
f = Housing: 0, 1 or 2.

Equipment Ratings:

Electrical Equipment for use indoor unclassified or Ordinary locations.

FM Approved for:

Bühler Technologies GmbH
Ratingen, Germany

To verify the availability of the Approved product, please refer to www.approvalguide.com

This certifies that the equipment described has been found to comply with the following Approval Standards and other documents:

FM3810

2005

Original Project ID: 3057155GP


Approval Granted: April 11, 2016

Subsequent Revision Reports / Date Approval Amended

Report Number Date

Report Number Date

FM Approvals LLC



J.E. Marquedant
Manager, Electrical Systems

11 April 2016

Date

To verify the availability of the Approved product, please refer to www.approvalguide.com

CERTIFICATE OF CONFORMITY



1. **ELECTRICAL EQUIPMENT PER US REQUIREMENTS**

2. **Certificate No:** FM16NUS0017

3. **Equipment:** P1.1 Sample Gas Pumps
(Type Reference and Name)

4. **Name of Listing Company:** Bühler Technologies GmbH

5. **Address of Listing Company:** Harkortstraße 29
40880, Ratingen, Germany

6. The examination and test results are recorded in confidential report number:

3057155 dated 11th April 2016

7. FM Approvals LLC, certifies that the equipment described has been found to comply with the following Approval standards and other documents:

FM Class 3810:2005

8. This certificate relates to the design, examination and testing of the products specified herein. The FM Approvals surveillance audit program has further determined that the manufacturing processes and quality control procedures in place are satisfactory to manufacture the product as examined, tested and Approved.

9. **Equipment Ratings:**

Electrical equipment for use indoor unclassified or Ordinary locations.

Certificate issued by:

J.E. Marquedant
Manager, Electrical Systems

9 December 2016

Date

To verify the availability of the Approved product, please refer to www.approvalguide.com

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC, 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA

T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmapprovals.com www.fmapprovals.com

SCHEDULE

to US Certificate Of Conformity No: FM16NUS0017

10. Description of Equipment:

The P1 sample gas pumps carry gases from various processes to analyzers. The gas circuit typically has additional analysis components such as sample gas probe, filter, flow meter, cooler, etc. The sample gas pump P1 consists of the main components, the pump head and motor. An eccentric converts the rotation of the motor into an up and down motion using a connecting rod, thus producing the pump mechanism. Inside the so-called pump body, above the bellows, which facilitates the pump motion, are inlet and outlet valves. The user connects the gas circuits to the sample gas pump through screw-in connections.

The P1 sample gas pumps are available as 12Vdc, 24Vdc, 115Vac, 60Hz or 230Vac, 50Hz. The 115Vac and 230Vac sample gas pumps are available with or without a cover over the electronics and motor. The 115Vac and 230Vac sample gas pumps have internal self resetting thermal protection built into the motor. The P1.1 sample gas pump is for general purpose non-hazardous locations.

Model Code Structure:

4228abc1def00FM. P1.1 Sample Gas Pump.

a = Motor voltage: 1, 2, 3 or 4.

b = Pump head position: 1 or 2.

c = Pump head material: 1, 2, 3 or 4.

d = Screw-in connections / pipe fitting: 0, 1, 2, 3, 5 or 6.

e = Mounting accessories: 0, 1 or 2.

f = Housing: 0 or 1

11. Test and Assessment Procedure and Conditions:

This Certificate has been issued in accordance with FM Approvals US Certification Requirements.

12. Schedule Drawings

A copy of the technical documentation has been kept by FM Approvals.

13. Certificate History

Details of the supplements to this certificate are described below:

Date	Description
11 th April 2016	Original Issue.
9 th December 2016	<u>Supplement 1:</u> Report Reference: – RR207245 dated 9 th December 2016 Description of the Change: Changes per this revision request are for the NI version of the product and don't affect this certificate. This certificate has been put into the new format.

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

CERTIFICATE OF CONFORMITY



1. **ELECTRICAL EQUIPMENT PER US REQUIREMENTS**

2. **Certificate No:** FM16NUS0017

3. **Equipment:** P1.1 Sample Gas Pumps
(Type Reference and Name)

4. **Name of Listing Company:** Bühler Technologies GmbH

5. **Address of Listing Company:** Harkortstraße 29
40880, Ratingen, Germany

6. The examination and test results are recorded in confidential report number:

3057155 dated 11th April 2016

7. FM Approvals LLC, certifies that the equipment described has been found to comply with the following Approval standards and other documents:

FM Class 3810:2005

8. This certificate relates to the design, examination and testing of the products specified herein. The FM Approvals surveillance audit program has further determined that the manufacturing processes and quality control procedures in place are satisfactory to manufacture the product as examined, tested and Approved.

9. **Equipment Ratings:**

Electrical equipment for use indoor unclassified or Ordinary locations.

Certificate issued by:

J.E. Marquedant
VP, Manager - Electrical Systems

2 April 2020

Date

To verify the availability of the Approved product, please refer to www.approvalguide.com

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC. 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA
T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmapprovals.com www.fmapprovals.com

SCHEDULE

to US Certificate Of Conformity No: FM16NUS0017

10. Description of Equipment:

The P1 sample gas pumps carry gases from various processes to analyzers. The gas circuit typically has additional analysis components such as sample gas probe, filter, flow meter, cooler, etc. The sample gas pump P1 consists of the main components, the pump head and motor. An eccentric converts the rotation of the motor into an up and down motion using a connecting rod, thus producing the pump mechanism. Inside the so-called pump body, above the bellows, which facilitates the pump motion, are inlet and outlet valves. The user connects the gas circuits to the sample gas pump through screw-in connections.

The P1 sample gas pumps are available as 12Vdc, 24Vdc, 115Vac, 60Hz or 230Vac, 50Hz. The 115Vac and 230Vac sample gas pumps have internal self resetting thermal protection built into the motor. The P1.1 sample gas pump is for general purpose non-hazardous locations.

Model Code Structure:

4228abc1def00FM. P1.1 Sample Gas Pump.

a = Motor voltage: 1, 2, 3 or 4.

b = Pump head position: 1 or 2.

c = Pump head material: 1, 2, 3 or 4.

d = Screw-in connections / pipe fitting: 0, 1, 2, 3, 5 or 6.

e = Mounting accessories: 0, 1 or 2.

f = Housing: 0 or 1

11. Test and Assessment Procedure and Conditions:

This Certificate has been issued in accordance with FM Approvals US Certification Requirements.

12. Schedule Drawings

A copy of the technical documentation has been kept by FM Approvals.

13. Certificate History

Details of the supplements to this certificate are described below:

Date	Description
11 th April 2016	Original Issue.
9 th December 2016	<u>Supplement 1:</u> Report Reference: – RR207245 dated 9 th December 2016. Description of the Change: Changes per this revision request are for the NI version of the product and don't affect this certificate. This certificate has been put into the new format.
2 nd April 2020	<u>Supplement 2:</u> Report Reference: – PR455937 dated 2 nd April 2020

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

SCHEDULE



to US Certificate Of Conformity No: FM16NUS0017

Date	Description
	Description of the Change: Add option for gas pump cover DC motors.

FM Approvals

FM Approvals

FM Approvals

THIS CERTIFICATE MAY ONLY BE REPRODUCED IN ITS ENTIRETY AND WITHOUT CHANGE

FM Approvals LLC. 1151 Boston-Providence Turnpike, Norwood, MA 02062 USA
T: +1 (1) 781 762 4300 F: +1 (1) 781 762 9375 E-mail: information@fmaprovals.com www.fmaprovals.com

RMA-Formular und Erklärung über Dekontaminierung

Formulario RMA y declaración de descontaminación



RMA-Nr./ RMA-No.

Die RMA-Nr. bekommen Sie von Ihrem Ansprechpartner im Vertrieb oder Service. Bei Rücksendung eines Altgeräts zur Entsorgung tragen Sie bitte in das Feld der RMA-Nr. "WEEE" ein./ Recibirá el número RMA de su contacto de ventas o de atención al cliente. Al enviar un aparato usado para su eliminación introduzca "WEEE" en el apartado del n.º RMA.

Zu diesem Rücksendeschein gehört eine Dekontaminierungserklärung. Die gesetzlichen Vorschriften schreiben vor, dass Sie uns diese Dekontaminierungserklärung ausgefüllt und unterschrieben zurücksenden müssen. Bitte füllen Sie auch diese im Sinne der Gesundheit unserer Mitarbeiter vollständig aus./ Junto con el formulario de devolución debe enviarse también una declaración de descontaminación. Las disposiciones legales indican que usted debe enviarnos esta declaración de descontaminación rellena y firmada. Por la salud de nuestros trabajadores, le rogamos que rellene este documento completamente.

Firma/ Empresa

Firma/ Empresa

Straße/ Calle

PLZ, Ort/ C.P., municipio

Land/ País

Gerät/ Dispositivo

Anzahl/ Cantidad

Auftragsnr./ Número de encargo

Ansprechpartner/ Persona de contacto

Name/ Nombre

Abt./ Dpto.

Tel./ Tel.

E-Mail

Serien-Nr./ N.º de serie

Artikel-Nr./ N.º de artículo

Grund der Rücksendung/ Motivo de devolución

- ☐ Kalibrierung/ Calibrado ☐ Modifikation/ Modificación
☐ Reklamation/ Reclamación ☐ Reparatur/ Reparación
☐ Elektroaltgerät/ Equipo eléctrico usado (WEEE)
☐ andere/ otros

bitte spezifizieren / especifique, por favor

War das Gerät im Einsatz?/ ¿Estaba en uso el dispositivo?

- ☐ Nein, da das Gerät nicht mit gesundheitsgefährdeten Stoffen betrieben wurde./ No, puesto que el dispositivo no utiliza sustancias peligrosas.
☐ Nein, da das Gerät ordnungsgemäß gereinigt und dekontaminiert wurde./ No, puesto que el dispositivo se ha limpiado y descontaminado correctamente.
☐ Ja, kontaminiert mit:/ Sí, con los siguientes medios:



☐
explosiv/
explosivo



☐
entzündlich/
inflamable



☐
brandfördernd/
comburente



☐
komprimierte
Gase/ gases
comprimidos



☐
ätzend/
corrosivo



☐
giftig,
Lebensgefahr/
venenoso, pe-
ligro de muerte



☐
gesundheitsge-
fährdend/
perjudicial para
la salud



☐
gesund-
heitsschädlich/
nocivo



☐
umweltge-
fährdend/
dañino para el
medio ambiente

Bitte Sicherheitsdatenblatt beilegen!/ Adjunte la hoja de datos de seguridad!

Das Gerät wurde gespült mit:/ El dispositivo ha sido lavado con:

Diese Erklärung wurde korrekt und vollständig ausgefüllt und von einer dazu befugten Person unterschrieben. Der Versand der (dekontaminierten) Geräte und Komponenten erfolgt gemäß den gesetzlichen Bestimmungen.

La presente declaración se ha cumplimentado correcta e íntegramente y ha sido firmada por una persona autorizada a tal efecto. El envío de los dispositivos y componentes (descontaminados) se realiza conforme a las disposiciones legales.

Falls die Ware nicht gereinigt, also kontaminiert bei uns eintrifft, muss die Firma Bühler sich vorbehalten, diese durch einen externen Dienstleister reinigen zu lassen und Ihnen dies in Rechnung zu stellen.

En caso de que la mercancía no esté limpia, es decir, nos llegue contaminada, la compañía Bühler se reserva el derecho a contratar a un proveedor externo para que la limpie y a cargarle los gastos a su cuenta.

Firmenstempel/ Sello de la empresa

Datum/ Fecha

rechtsverbindliche Unterschrift/ Firma autorizada



Vermeiden von Veränderung und Beschädigung der einzusendenden Baugruppe

Die Analyse defekter Baugruppen ist ein wesentlicher Bestandteil der Qualitätssicherung der Firma Bühler Technologies GmbH. Um eine aussagekräftige Analyse zu gewährleisten muss die Ware möglichst unverändert untersucht werden. Es dürfen keine Veränderungen oder weitere Beschädigungen auftreten, die Ursachen verdecken oder eine Analyse unmöglich machen.

Umgang mit elektrostatisch sensiblen Baugruppen

Bei elektronischen Baugruppen kann es sich um elektrostatisch sensible Baugruppen handeln. Es ist darauf zu achten, diese Baugruppen ESD-gerecht zu behandeln. Nach Möglichkeit sollten die Baugruppen an einem ESD-gerechten Arbeitsplatz getauscht werden. Ist dies nicht möglich sollten ESD-gerechte Maßnahmen beim Austausch getroffen werden. Der Transport darf nur in ESD-gerechten Behältnissen durchgeführt werden. Die Verpackung der Baugruppen muss ESD-konform sein. Verwenden Sie nach Möglichkeit die Verpackung des Ersatzteils oder wählen Sie selber eine ESD-gerechte Verpackung.

Einbau von Ersatzteilen

Beachten Sie beim Einbau des Ersatzteils die gleichen Vorgaben wie oben beschrieben. Achten Sie auf die ordnungsgemäße Montage des Bauteils und aller Komponenten. Versetzen Sie vor der Inbetriebnahme die Verkabelung wieder in den ursprünglichen Zustand. Fragen Sie im Zweifel beim Hersteller nach weiteren Informationen.

Einsenden von Elektroaltgeräten zur Entsorgung

Wollen Sie ein von Bühler Technologies GmbH stammendes Elektroprodukt zur fachgerechten Entsorgung einsenden, dann tragen Sie bitte in das Feld der RMA-Nr. „WEEE“ ein. Legen Sie dem Altgerät die vollständig ausgefüllte Dekontaminierungserklärung für den Transport von außen sichtbar bei. Weitere Informationen zur Entsorgung von Elektroaltgeräten finden Sie auf der Webseite unseres Unternehmens.

Evitar modificaciones y daños en el conjunto que se va a enviar

El análisis de módulos defectuosos es una parte importante del control de calidad de Bühler Technologies GmbH. Para garantizar un análisis concluyente la mercancía debe inspeccionarse alterándola lo mínimo posible. No pueden darse cambios ni otros daños que puedan ocultar las causas o impedir el análisis.

Manipulación de conjuntos sensibles a la electricidad estática

En el caso de módulos electrónicos puede tratarse de módulos electrostáticos sensibles. Debe tenerse en cuenta que hay que tratar estos módulos conforme a ESD. En caso de que sea posible los módulos deben cambiarse en un lugar de trabajo conforme con ESD. Si no es posible, deben adoptarse medidas conformes con ESD en caso de intercambio. El transporte puede llevarse a cabo en recipientes conformes con ESD. El embalaje de los módulos debe estar conforme con ESD. Utilice si es posible el embalaje de la pieza de repuesto o seleccione usted mismo un embalaje conforme con ESD.

Instalación de piezas de repuesto

Al instalar la pieza de repuesto tenga en cuenta las mismas indicaciones que se han descrito anteriormente. Asegúrese de que realiza el montaje de la pieza y de todos los componentes. Antes de la puesta en funcionamiento, ponga el cableado de nuevo en su estado original. En caso de dudas pida más información al fabricante.

Envío de dispositivos eléctricos usados para su eliminación

Si desea enviar un producto eléctrico de Bühler Technologies GmbH para su adecuada eliminación por parte de nuestros profesionales, introduzca "WEEE" en el apartado del n.º RMA. Para el transporte, adjunte la declaración de descontaminación del dispositivo usado completamente cumplimentada de forma que sea visible desde fuera. Puede encontrar más información sobre la eliminación de dispositivos electrónicos usados en la página web de nuestra empresa.

